Commercial Topload Washers

Metered and Nonmetered Refer to Page 5 for Model Numbers

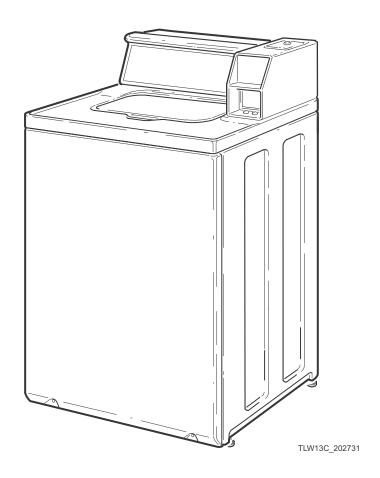




Table of Contents

Title	Page
Parts Ordering Information	3
Serial Plate Location	
Model Identification	
Coin Slide Extension, Meter Case and Control	
Meter Case	
Non-Electronic Coin Drop	
Electronic Coin Drop	
Control Panel, Control Hood and Controls (Drawing 1 of 12)	
Control Panel, Control Hood and Controls (Drawing 2 of 12)	
Control Panel, Control Hood and Controls (Drawing 3 of 12)	
Control Panel, Control Hood and Controls (Drawing 4 of 12)	
Control Panel, Control Hood and Controls (Drawing 5 of 12)	
Control Panel, Control Hood and Controls (Drawing 6 of 12)	
Control Panel, Control Hood and Controls (Drawing 7 of 12)	
Control Panel, Control Hood and Controls (Drawing 8 of 12)	
Control Panel, Control Hood and Controls (Drawing 9 of 12)	
Control Panel, Control Hood and Controls (Drawing 10 of 12)	
Control Panel, Control Hood and Controls (Drawing 11 of 12)	34
Control Panel, Control Hood and Controls (Drawing 12 of 12)	
Lid	
Cabinet Top	40
Lid, Lid Lock and Cabinet Top	42
Lid Switch	44
Mixing Valve-to-Tub Cover Hose and Mixing Valve	46
Fill Hose	48
Motor, Belt, Pump and Idler Assembly (Drawing 1 of 3)	50
Motor, Belt, Pump and Idler Assembly (Drawing 2 of 3)	52
Motor, Belt, Pump and Idler Assembly (Drawing 3 of 3)	54
Idler Lever Kits	56
Agitator, Drive Bell, Hub and Lip Seal Kit and Washtub	58
Outer Tub, Cover, Bearing and Seal Housing and Counterweight	60
Pressure Hose and Bulb	62
Transmission Assembly	64
Drain Hoses and Siphon Break Kit	66
Weldment and Bearing Assembly, Brake and Pulley	68
Front Panel, Base Assembly and Cabinet Kit	
Mixing Valve and Motor Disconnect Blocks, Terminals and Terminal Extractor Tool	72
Lead-In Cord	74
Terminals	76
Shipping Materials and Special Tools	78
Special Tools	80

© Copyright 2018, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Wire Harnesses and Wires (Drawing 1 of 2)	82
Wire Harnesses and Wires (Drawing 2 of 2)	
Parts Index	
	_

Parts Ordering Information


If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call the number listed below:

(920) 748-3121 Ripon, Wisconsin

Serial Plate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on serial plate(s) as shown.

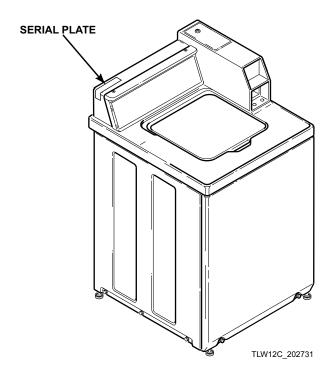

Notes


Model Identification

Information in this manual is applicable to these washer models:

DIAM ID CODD 44 OT MO4	A IVA/A ID VOODOOON IVA/OO	OLA/AU VOA DAAOTIA/OA
BWNBC2PP112TW01	NWNBX2SP302NW22	SWNLY2AP112TW01
BWNBX2PP112TW01	NWNMN1SP542NW22	SWNLY2HP112TW01
BWNBX2PP302AW01	NWNMN2SP302NW22	SWNLY2PP112TW01
BWNBY2PP112TW01	NWNSX2SP302NW22	SWNLY2SP112TW01
BWNMN2PP112CW01	PWNBC2PP112TG02	SWNLY2SP302NW22
BWNMN2PP302AW01	PWNBX2PP112TG02	SWNMN1SP302AW01
BWNSX2PP112CW01	PWNBX2PP302AG02	SWNMN1SP302NW22
GWNMN1PP302AW01	PWNSX2PP112TG02	SWNMN1SP302SW01
GWNMN2PP302AW01	SWNBC2PP112TQ01	SWNMN2PP112TW01
GWNMN2PP302NW01	SWNBC2PP112TW01	SWNMN2SP112CW01
GWNMN2PP112TW01	SWNBC2PP112TW02	SWNMN2SP112TW01
GWNSX1PP302AW01	SWNBC2SP112TQ01	SWNMN2SP112TW08
GWNSX1PP302EW09	SWNBC2SF112TQ01 SWNBC2SP112TW01	SWNSX1PP112TQ01
GWNSX2PP112TW01	SWNBX1SP122DW01	SWNSX1PP112TW01
GWNSX2PP302AW01	SWNBX1SP542DW01	SWNSX1PP302AW01
GWNSX2PP302NW01	SWNBX2PP112TW02	SWNSX1SP112TQ01
HWNBC2PP112TQ01	SWNBX2SP082JW01	SWNSX1SP112TW01
HWNBC2PP112TW01	SWNBX2SP112FW27	SWNSX1SP302AW01
HWNBD2SP112CQ01	SWNBX2SP112TQ01	SWNSX1SP302BW01
HWNBD2SP112CW01	SWNBX2SP112TW01	SWNSX1SP302EW09
HWNBE2SP112CW01	SWNBX2SP302AW01	SWNSX1SP302NW22
HWNBX1SP122DW01	SWNBX2SP302NQ22	SWNSX1SP302SQ01
HWNBX1SP542DW01	SWNBX2SP302NW22	SWNSX1SP302SW01
HWNBX2SP112CW01	SWNBY2PP112TW01	SWNSX1SP302UW01
HWNBX2SP112FW28	SWNBY2SP112TW01	SWNSX1SP542NW22
HWNBY2PP112TW01	SWNLC2AP112TW01	SWNSX2PP112TQ01
HWNBY2SP112CW01	SWNLC2AP112TW02	SWNSX2PP112TW01
HWNLE2AP112CW01	SWNLC2HP112TQ01	SWNSX2PP112TW02
HWNLE2HP112CW01	SWNLC2HP112TW01	SWNSX2SP112CW02
HWNLE2SP112CW01	SWNLC2HP112TW02	SWNSX2SP112TQ01
HWNLX1SP122DW01	SWNLC2PP112TW01	SWNSX2SP112TW01
HWNLX1SP542DW01	SWNLC2PP112TW02	SWNSX2SP112TW02
HWNLX2HP112CW01	SWNLC2SP112TQ01	SWNWY2AP112TW11
HWNLX2SP112CW01	SWNLC2SP112TW01	SWNWY2HP112TW11
HWNLY2HP112CW01	SWNLC2SP112TW02	TWNBX2SP302NW22
HWNLY2SP112CW01	SWNLX1SP122DW01	UWNMN2SP112CW01
HWNMN2PP112TW01	SWNLX1SP542DW01	0 V V V V V V V V V V V V V V V V V V V
HWNMN2SP112CW01	SWNLX1SP542DW01	
HWNSX1PP112TQ01	SWNLX13F342NW23 SWNLX2AP112TW02	
HWNSX1PP112TW01	SWNLX2AP112TW02 SWNLX2HP112TW01	
	_	
HWNSX1SP112CW01	SWNLX2HP112TW02	
HWNSX1SP302UW09	SWNLX2PP112TW02	
HWNSX2PP112TQ01	SWNLX2SP112TW01	
HWNSX2PP112TW01	SWNLX2SP112TW02	
HWNSX2SP112CW01	SWNLX2SP302AW01	

Coin Slide Extension, Meter Case and Control

Models BWNSX2PP112CW01, GWNSX1PP302AW01, GWNSX1PP302EW09, GWNSX2PP112TW01, GWNSX2PP302AW01, GWNSX2PP302NW01, HWNSX1PP112TQ01, HWNSX1PP112TW01, HWNSX1SP112CW01, HWNSX1SP302UW09, HWNSX2PP112TQ01, HWNSX2PP112TW01, HWNSX2SP112CW01, NWNSX2SP302NW22, PWNSX2PP112TG02, SWNSX1PP112TQ01, SWNSX1PP112TW01, SWNSX1SP302AW01, SWNSX1SP112TQ01, SWNSX1SP112TW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX1SP302EW09, SWNSX1SP302NW22, SWNSX1SP302SQ01, SWNSX1SP302SW01, SWNSX1SP302UW01, SWNSX1SP542NW22, SWNSX2PP112TQ01, SWNSX2PP112TW01, SWNSX2SP112TW02, SWNSX2SP112TW02, SWNSX2SP112TW02

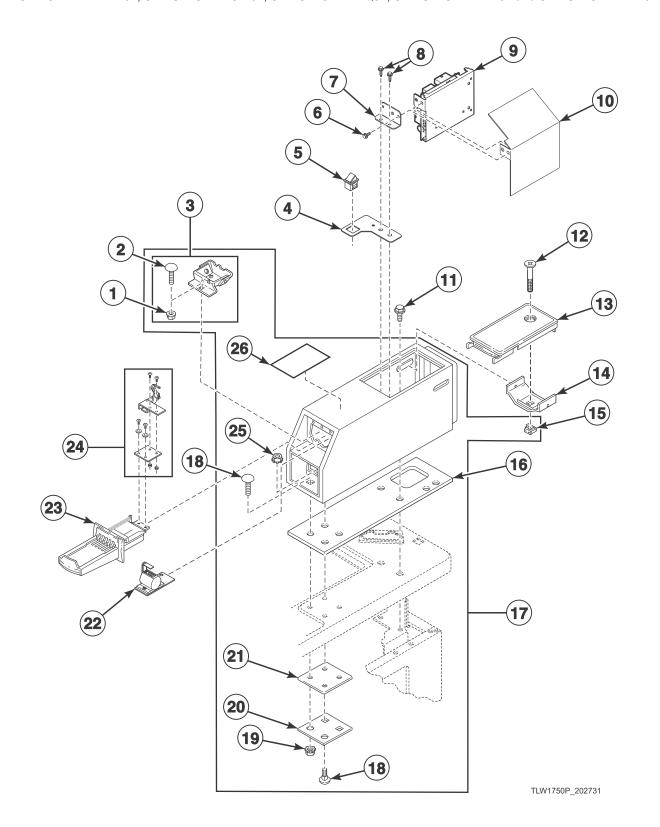


Coin Slide Extension, Meter Case and Control

REF	PART NO.	DESCRIPTION	COMMENTS
1	29796	Nut	
2	29651	Bolt	
3	523P3	Coin Funnel Kit	
4	803662	Bracket	
5	431159	Switch	
6	D501524	Screw	
7	201581	Chassis Mounting Bracket	
8	D503688	Screw	
9	202393P	Control Assembly	
10	D512304	Control Shield	
11	36048	Screw	
12	D503673	Screw	
13	39874QP	Service Door Assembly	Bisque; Models HWNSX1PP112TQ01, HWNSX2PP112TQ01, SWNSX1PP112TQ01, SWNSX1SP112TQ01, SWNSX1SP302SQ01, SWNSX2PP112TQ01 and SWNSX2SP112TQ01
	39874DG	Service Door Assembly	Gray; Model PWNSX2PP112TG02
	39874WP	Service Door Assembly	White; All other models
14	204616	Meter Case Locking Bracket	
15	30647	Nut	
16	26354	Meter Case Gasket	
17	803575WP	Meter Case Assembly Kit	White; Models SWNSX2PP112TW02, SWNSX2SP112CW02 and SWNSX2SP112TW02
	803575DG	Meter Case Assembly Kit	Gray; Model PWNSX2PP112TG02
	803578P	Coin Box Extension Kit	Use with 803575W or 803575DG Meter Case Assembly to extend shorter 7-inch coin boxes; Models PWNSX2PP112TG02, SWNSX2PP112TW02, SWNSX2SP112CW02 and SWNSX2SP112TW02
	201010QP	Meter Case Kit	Bisque; Includes items 3, 15, 16, 18-21 and 24; Models HWNSX1PP112TQ01, HWNSX2PP112TQ01, SWNSX1PP112TQ01, SWNSX1SP302SQ01, SWNSX2PP112TQ01 and SWNSX2SP112TQ01
	201010WP	Meter Case Kit	White; Includes items 3, 15, 16, 18-21 and 24; All other models
18	02505	Bolt	
19	29786	Nut	
20	35525	Meter Case Lockdown Bracket	
21	35526	Meter Case Bracket Gasket	
22	201280P	Mechanical Counter Kit Assembly	
23	CK001	Coin Slide Kit	U.S.A.
	CK009	Coin Slide Kit	STD-118-1 Token
	CK010P	Coin Slide Kit	STD-118-5 Token
	CK011	Coin Slide Kit	STD-118-10 Token
	CK014	Coin Slide Kit	U.S.A.
	CK017	Coin Slide Kit	Chilly Willy Token
	CK027	Slide	Tokette
24	200913	Coin Slide Extension Kit	Includes spring and items 4 and 5
	804794	Spring	
25	802337	Nut	
26	37068	Operation Instruction Label	Models GWNSX1PP302EW09, HWNSX1SP302UW09, SWNSX1SP302EW09 and SWNSX1SP302UW01

Meter Case

Models BWNBC2PP112TW01, BWNBX2PP112TW01, BWNBX2PP302AW01, HWNBC2PP112TQ01, HWNBC2PP112TW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBX1SP542DW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNLE2PP112CW01, HWNLE2PP112CW01, HWNLX1SP542DW01, HWNLX1SP542DW01, HWNLX1SP542DW01, HWNLX1SP542DW01, HWNLX2SP112CW01, NWNBX2SP302NW22, PWNBC2PP112TG02, PWNBX2PP302AG02, SWNBC2PP112TQ01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBX1SP542DW01, SWNBX2SP112TW02, SWNBX2SP082JW01, SWNBX2SP112TW01, SWNBX1SP12DW01, SWNBX2SP112TW01, SWNBX2SP302AW01, SWNBX2SP302NW22, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW02, SWNLC2PP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX2SP112TW02, SWNLX2SP112TW02, SWNLX2SP302NW22

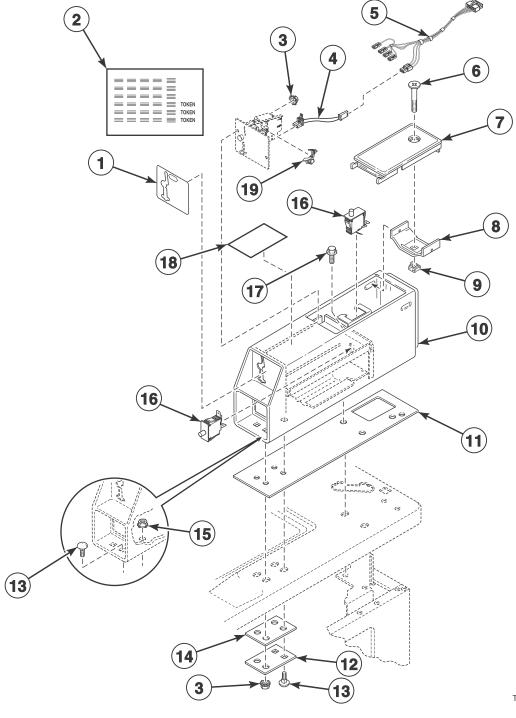


Meter Case

REF	PART NO.	DESCRIPTION	COMMENTS
1	38717	Single Overlay	\$.25
	38676	Overlay Kit	Dual; Includes item 2
	39073	Dual Overlay	\$.25 and \$1.00
2	38725	Coin Identification Paper	
3	29786	Nut	
4	200674P	Opto Coupler	
5	802904P	Harness Assembly	Models BWNBX2PP112TW01, HWNBC2PP112TQ01, HWNBC2PP112TW01, PWNBC2PP112TG02, SWNBC2PP112TQ01, SWNBC2PP112TW01, SWNBC2PP112TW02, SWNBC2SP112TQ01, SWNBC2SP112TW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TW02, SWNLC2HP112TW02, SWNLC2PP112TW01, SWNLC2PP112TW02, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01 and SWNLC2SP112TW02
-	802905	Harness Assembly	All other models
6	D503673	Screw	
7	39874WP	Service Door Assembly	White
	39874QP	Service Door Assembly	Bisque
	39874DG	Service Door Assembly	Dark gray
8	204616	Meter Case Locking Bracket	
9	30647	Nut	
10	803063WP	Meter Case Assembly Kit	Models SWNBC2PP112TW02, SWNBX2PP112TW02, SWNLC2AP112TW02, SWNLC2HP112TW02, SWNLC2PP112TW02, SWNLC2SP112TW02, SWNLX2AP112TW02, SWNLX2AP112TW02 and SWNLX2SP112TW02
	803063DG	Meter Case Assembly	Models PWNBC2PP112TG02, PWNBX2PP112TG02 and PWNBX2PP302AG02
	803578P	Coin Box Extension Kit	Use with 803063W Meter Case Assembly to extend shorter 7 inch coin boxes; Models PWNBC2PP112TG02, PWNBX2PP112TG02, PWNBX2PP112TG02, SWNBC2PP112TW02, SWNLC2PP112TW02, SWNLC2PP112TW02, SWNLX2PP112TW02 and SWNLX2SP112TW02
	802505W	Meter Case Assembly	Models HWNBE2SP112CW01, HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLE2SP112CW01, SWNLC2AP112TW02, SWNLC2HP112TW02, SWNLX2AP112TW02 and SWNLX2HP112TW02
	38724W	Meter Case Assembly	White; All other models
	38724Q	Meter Case Assembly	Bisque; All other models
11	26354	Meter Case Gasket	
12	35525	Meter Case Lockdown Bracket	
13	02505	Bolt	
14	35526	Meter Case Bracket Gasket	
15	802337	Nut	
16	D512973	Switch	
17	36048	Screw	
18	203152	Operation Instruction Label	
19	201595P	Wire Guard	Anti-stringing security device

Non-Electronic Coin Drop

Models BWNBC2PP112TW01, BWNBX2PP112TW01, BWNBX2PP302AW01, HWNBC2PP112TQ01, HWNBC2PP112TW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBX1SP542DW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNLE2PP112CW01, HWNLE2PP112CW01, HWNLE2SP112CW01, HWNLX1SP12DW01, HWNLX1SP542DW01, HWNLX1SP542DW01, HWNLX2SP112CW01, HWNLX2SP112CW01, NWNBX2SP302NW22, PWNBC2PP112TG02, PWNBX2PP302AG02, SWNBC2PP112TQ01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP302AW01, SWNBX2SP302NW22, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2PP112TW02, SWNLC2SP112TQ01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX2SP112TW02, SWNLX2SP112TW02, SWNLX2SP302NW22

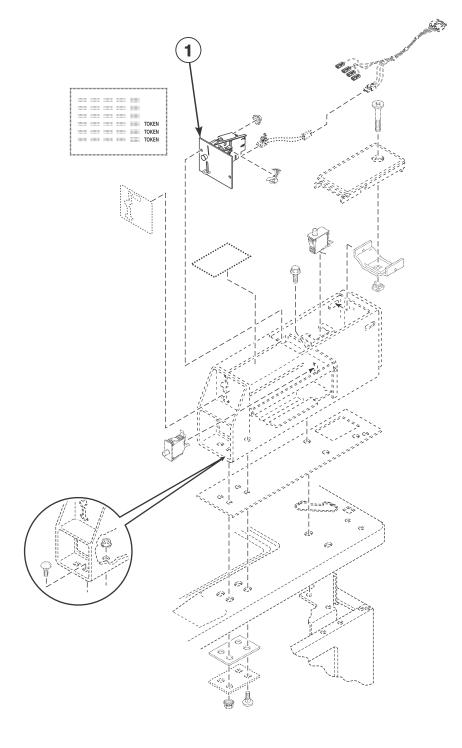


TLW1741PA 202731

Non-Electronic Coin Drop

REF	PART NO.	DESCRIPTION	COMMENTS
1	70441601P	Coin Drop	Single; U.S.A.; \$.25
	200731	Coin Drop	Single; U.S.A.; \$1.00
	70441603	Coin Drop	Dual; U.S.A.; \$.25 and \$1.00
	38467	Coin Drop Assembly	Dual; Australia; \$0.20 and \$1.00
	70447301	Coin Drop Assembly	Dual; Australia; \$1.00 and \$2.00
	38464P	Coin Drop Assembly	Single; Canada; .25
	70441602	Coin Drop Assembly	Dual; Canada; .25 and 1.00
	38472	Coin Drop Assembly	Dual; England; 20 pence and 1 pound
	38519	Coin Drop Assembly	Dual; Japan; 100 yen and 500 yen
	38521	Coin Drop Assembly	Dual; Korea; 100 won and 500 won
	CK114	Coin Drop Assembly	Single; Singapore; Old \$1.00
	CK123	Coin Drop Assembly	Single: Singapore; New \$1.00
	70482401	Coin Drop Assembly	Dual; New Zealand ; \$1.00 and \$2.00
	38462P	Coin Drop Assembly	Single; Token; STD 118-1
	38463	Coin Drop Assembly	Single; Token; STD 118-5
	38963P	Coin Drop	Single; Token STD 118-16
	553192	Coin Drop Assembly	Dual; Danish Crown
	39157	Coin Drop Assembly	Dual; Israel; 1 and 5 Shekel
	38475	Coin Drop Assembly	Single; Japan; 100 yen
	210195	Coin Drop Assembly	Dual; 0.20 and 1.00 Euro
	210196	Coin Drop Assembly	Dual; 0.50 and 1.00 Euro
	70281102	Coin Drop Assembly	Dual; Taiwan; 10 and 50 NT
	70506901	Coin Drop Assembly	Single; Singapore; \$1.00 NEW
	39748	Coin Drop	Single; Jeton 08MS
	201141	Coin Drop Assembly	Single; Token; Jeton wh121
	CK055	Coin Drop Kit	Token STD 118-1
	CK056	Coin Drop Kit	Token STD 118-5
	CK057	Coin Drop Kit	Single; Canada; \$0.25
	CK058	Coin Drop Kit	Dual; Canada; \$0.25 and \$1.00
	CK077	Coin Drop Kit	Single; Taiwan; 10 NT
	CK060	Coin Drop Kit	Dual; Australia; \$0.20 and \$1.00
	CK071	Coin Drop Kit	Dual; Japan; 100 yen and 500 yen
	CK078	Coin Drop Kit	Single; U.S.A.; \$0.25
	CK085	Coin Drop Kit	Single; Token STD 118-16
	CK086	Coin Drop Kit	Dual; Israel; 1 and 5 Shekel
	CK089	Coin Drop Kit	Single; Japan; 100 yen
	CK090	Coin Drop Kit	Single; U.S.A.; \$1.00
	CK091	Coin Drop Kit	Dual; 0.20 and 1.00 Euro
	CK097	Coin Drop Kit	Single; Token; Jeton 08MS
	CK098	Coin Drop Kit	Single; Token; Jeton wh121
	CK107	Coin Drop Kit	Dual; Taiwan; 10 and 50 NT
	CK111	Coin Drop Kit	Dual; Australia; \$1.00 and \$2.00
	CK122	Coin Drop Kit	Dual; New Zealand; \$1.00 and \$2.00

Electronic Coin Drop

Models BWNBC2PP112TW01, BWNBX2PP112TW01, BWNBX2PP302AW01, HWNBC2PP112TQ01, HWNBC2PP112TW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBX1SP542DW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNLE2PP112CW01, HWNLE2PP112CW01, HWNLE2SP112CW01, HWNLX1SP12DW01, HWNLX1SP542DW01, HWNLX1SP542DW01, HWNLX2SP112CW01, HWNLX2SP112CW01, NWNBX2SP302NW22, PWNBC2PP112TG02, PWNBX2PP302AG02, SWNBC2PP112TQ01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP112TW01, SWNBX2SP302AW01, SWNBX2SP302NW22, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2PP112TW02, SWNLC2SP112TQ01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLC2SP112TW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX2SP112TW02, SWNLX2SP112TW02, SWNLX2SP302NW22

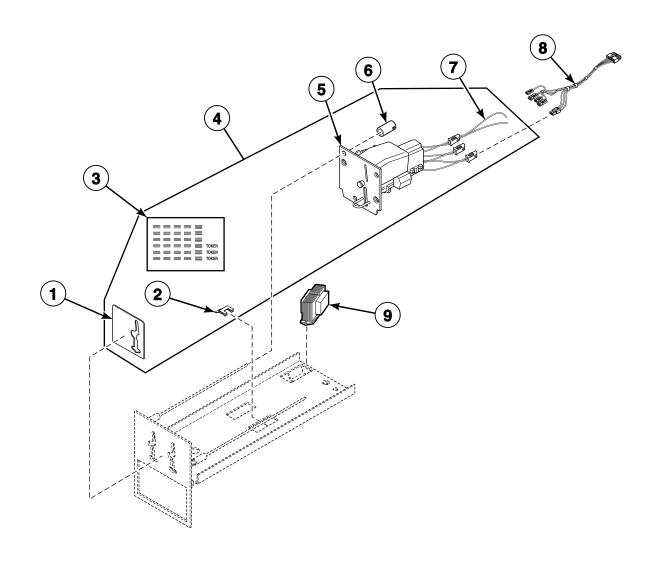


TLW1638P_202731

Electronic Coin Drop

REF	PART NO.	DESCRIPTION	COMMENTS
1	201091	Overlay	
2	201572	Clip	
3	38725	Coin Identification Paper	
4	CK115	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Models BWNBC2PP112TW01, HWNBC2PP112TQ01, HWNBC2PP112TW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, PWNBC2PP112TG02, SWNBC2PP112TQ01, SWNBC2PP112TW02, SWNBC2SP112TW01, SWNBC2SP112TQ01, SWNBC2SP112TW01, SWNLC2AP112TW01 SWNLC2HP112TQ01, SWNLC2AP112TW02, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLC2PP112TW01, SWNLC2PP112TW02, SWNLC2SP112TW01, SWNLC2SP112TW02 and SWNLC2SP112TW02 must also order items 8 and 9
	CK099	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Australia, New Zealand, Hong
	CK100	Electronic Coin Drop Kit	Kong and South Korea coins Includes items 1-3 and 5-7; Euro and Great Britain coins
	CK100	Electronic Coin Drop Kit	Includes items 1-3 and 5-7, Euro, Denmark and Norway
	CKIUI	Electronic Cont Drop Kit	coins
	CK103	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Euro, Lithuania and Latvia coins
	CK116	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Malaysia (old and new) and China coins
	CK108	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; South African 1, 2, 5 rand coins
	CK109	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Euro coins
	CK110	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Mexico, Ecuador and United States coins
	CK113	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Japan and Taiwan coins
	CK120	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Chile coins
	CK121	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Singapore coins
	CK117	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Russian coins
	CK118	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Philippine coins
	CK119	Electronic Coin Drop Kit	Includes items 1-3 and 5-7; Thailand coins
5	70294105P	Electronic Coin Drop Assembly	Australia, New Zealand, Hong Kong and South Korea coins
	70513302	Electronic Coin Drop Assembly	Euro and Great Britain coins
	70294122	Electronic Coin Drop Assembly	Great Britain coins
	70294104	Electronic Coin Drop Assembly	Euro, Denmark and Norway coins
	70294107	Electronic Coin Drop Assembly	Euro, Lithuania and Latvia coins
	70294117	Electronic Coin Drop Assembly	Russia coins
	70294110	Electronic Coin Drop Assembly	South African 1, 2, 5 rand coins
	70294111	Electronic Coin Drop Assembly	Euro coins
	70294106 70294120	Electronic Coin Drop Assembly Electronic Coin Drop Assembly	Mexico, Ecuador and United States coins Chile coins
	70294121	Electronic Coin Drop Assembly	Singapore coins
	70294103P	Electronic Coin Drop Assembly	Euro and Great Britain coins
	70513311	Electronic Coin Drop Assembly	Malaysia (old and new) and China coins
	70294119	Electronic Coin Drop Assembly	Thailand coins
6	201216	Nut	Thanana come
7	201104	Coin Drop Wire Harness	
8	802905	Harness Assembly	Electronic coin drop requires this harness. If unit is not factory-equipped with this harness, it must be ordered separately.
9	201375P	Transformer	Electronic coin drop requires this transformer. If unit is not factory-equipped with this transformer, it must be ordered separately.

Control Panel, Control Hood and Controls (Drawing 1 of 12)

Models BWNMN2PP112CW01, GWNMN2PP302NW01, GWNMN2PP112TW01, HWNMN2PP112TW01, HWNMN2SP112CW01, NWNMN1SP542NW22, NWNMN2SP302NW22, SWNMN1SP302NW22, SWNMN1SP302SW01, SWNMN2PP112TW01, SWNMN2SP112CW01, SWNMN2SP112TW01, SWNMN2SP112TW08 and UWNMN2SP112CW01

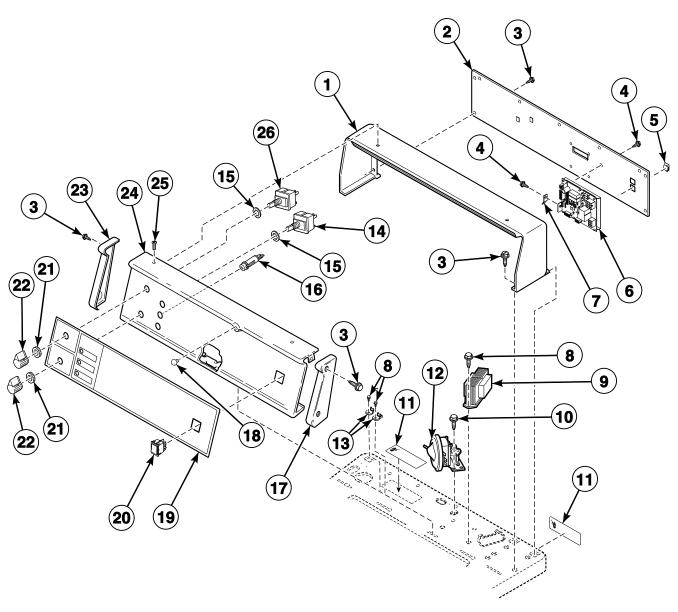


TLW1736P_202731

Control Panel, Control Hood and Controls (Drawing 1 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
1	210142W	Control Hood	
2	201732	Rear Panel	
3	D501086	Screw	
4	D501524	Screw	
5	M406494	Panel Clip	
6	202393P	Control Assembly	
7	00177	Male Tab Terminal	
8	D503661	Screw	
9	201616P	Transformer	Models GWNMN2PP302NW01, NWNMN1SP542NW22, NWNMN2SP302NW22, SWNMN1SP302NW22 and SWNMN1SP302SW01
	201587P	Transformer	All other models
10	23962	Screw	
11	D505281	Disconnect Power Warning Label	
12	202655	Pressure Switch	
13	210100	Resistor	Models GWNMN2PP302NW01, NWNMN1SP542NW22, NWNMN2SP302NW22, SWNMN1SP302NW22 and SWNMN1SP302SW01
14	201686	Cycle Selector Switch	All models except NWNMN1SP542NW22, SWNMN1SP302NW22 and SWNMN1SP302SW01
15	91176	Washer	
16	801431	Light	
17	210108W	End Cap	Right
18	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
19	201718	Control Overlay	Models SWNMN2PP112TW01, SWNMN2SP112CW01, SWNMN2SP112TW01 and SWNMN2SP112TW08
	201762	Control Overlay	Models HWNMN2PP112TW01 and HWNMN2SP112CW01
	202012	Control Overlay	Model BWNMN2PP112CW01
	201936	Control Overlay	Models GWNMN2PP302NW01 and GWNMN2PP112TW01
	202012	Control Overlay	Model BWNMN2PP112CW01
	201744	Control Overlay	Models SWNMN1SP302NW22 and SWNMN1SP302SW01
	202134	Control Overlay	Model NWNMN1SP542NW22
	202129	Control Overlay	Model NWNMN2SP302NW22
	202362	Control Overlay	Model UWNMN2SP112CW01
20	70455101	Rocker Switch	
21	24205	Nut	
22	39897	Switch Knob	
23	210109W	End Cap	Left
24	201742W	Control Panel Assembly	
25	52864	Screw	
26	201686	Cycle Selector Switch	Models NWNMN1SP542NW22, SWNMN1SP302NW22 and SWNMN1SP302SW01
	27761	Switch	All other models

Control Panel, Control Hood and Controls (Drawing 2 of 12) Models BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01 and SWNMN1SP302AW01

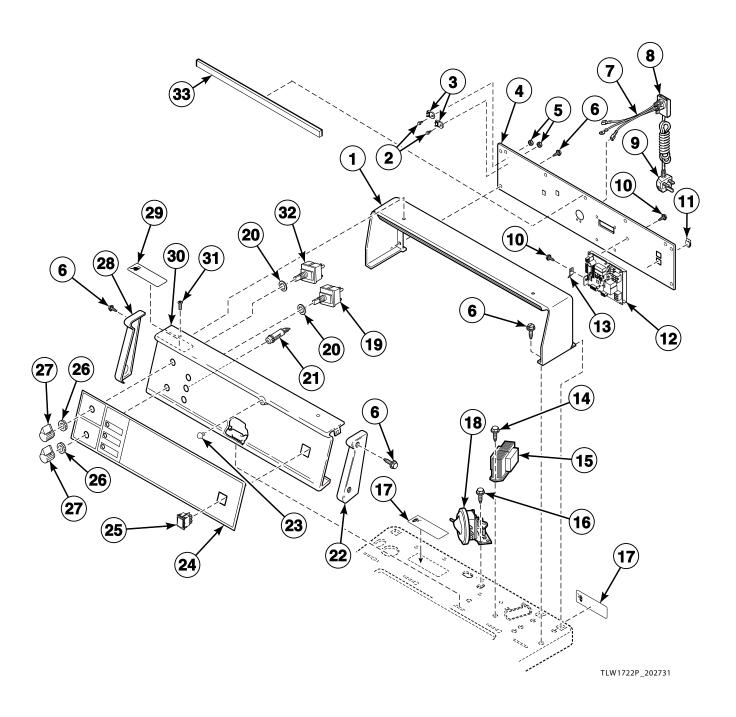


Control Panel, Control Hood and Controls (Drawing 2 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
1	210142W	Control Hood	
2	685837	Screw	
3	210100	Resistor	
4	203072	Rear Panel	
5	802343	Nut	
6	D501086	Screw	
7	39923	Lead-In Wire Harness Assembly	
8	39922	Cable Connection Box	
9	39931	Power Cord Assembly	
10	D501524	Screw	
11	M406494	Panel Clip	
12	202393P	Control Assembly	
13	00177	Male Tab Terminal	
14	D503661	Screw	
15	201616P	Transformer	
16	23962	Screw	
17	D505281	Disconnect Power Warning Label	
18	202655	Pressure Switch	
19	201686	Cycle Selector Switch	Models BWNMN2PP302AW01 and GWNMN2PP302AW01
20	91176	Washer	
21	801431	Light	
22	210108W	End Cap	Right
23	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
24	201744	Control Overlay	Model SWNMN1SP302AW01
	201938	Control Overlay	Model GWNMN1PP302AW01
	201936	Control Overlay	Model GWNMN2PP302AW01
	202012	Control Overlay	Model BWNMN2PP302AW01
25	70455101	Rocker Switch	
26	24205	Nut	
27	39897	Switch Knob	
28	210109W	End Cap	Left
29	D511021	Shock Warning Label	
30	201742W	Control Panel Assembly	
31	52864	Screw	
32	27761	Switch	Models BWNMN2PP302AW01 and GWNMN1PP302AW01
-	201686	Cycle Selector Switch	All other models
33	70392701P	Gasket	

Control Panel, Control Hood and Controls (Drawing 3 of 12)

Models BWNSX2PP112CW01, GWNSX2PP112TW01, HWNSX1PP112TQ01, HWNSX1PP112TW01, HWNSX1SP112CW01, HWNSX2PP112TQ01, HWNSX2PP112TQ01, HWNSX2PP112TQ01, BWNSX1PP112TQ01, SWNSX1PP112TQ01, SWNSX1PP112TW01, SWNSX1SP112TW01, SWNSX2PP112TW01, SWNSX2SP112TW01, SWNSX2SP112TW02, SWNSX2SP112TW02, SWNSX2SP112TW02

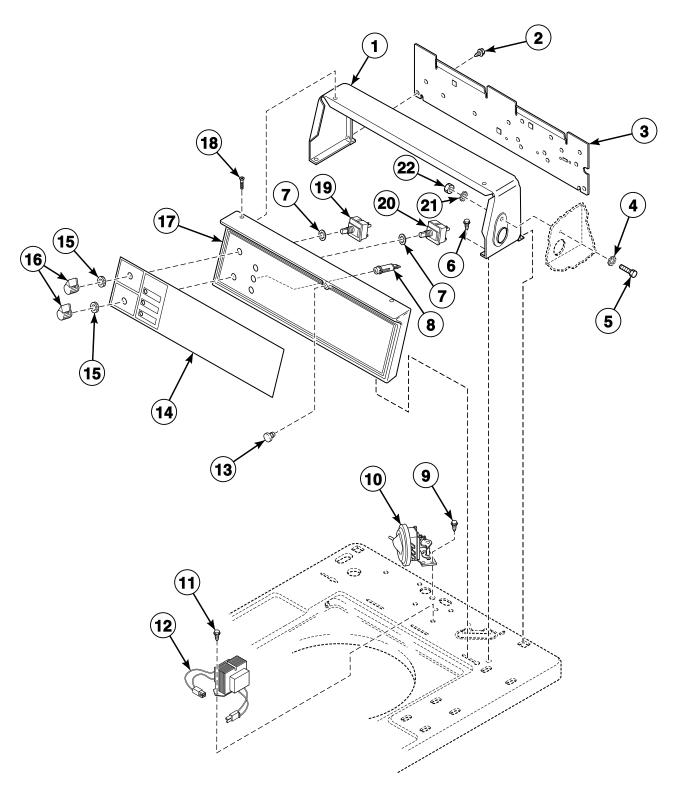


TLW1600P_202731

Control Panel, Control Hood and Controls (Drawing 3 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
1	37075W	Control Hood	White
	37075Q	Control Hood	Bisque
	37075DG	Control Hood	Gray
2	23222	Screw	
3	38267	Hood Back Panel	
4	M400017	Washer	
5	02916	Screw	
6	D501086	Screw	
7	91176	Washer	
8	801431	Light	
9	23962	Screw	
10	202655	Pressure Switch	
11	D503661	Screw	
12	201587P	Transformer	
13	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
14	201668	Control Overlay	Models SWNSX2PP112TQ01, SWNSX2PP112TW01, SWNSX2PP112TW02, SWNSX2SP112CW02, SWNSX2SP112TQ01, SWNSX2SP112TW01 and SWNSX2SP112TW02
	201674	Control Overlay	Models HWNSX1PP112TQ01, HWNSX1PP112TW01
			and HWNSX1SP112CW01
	201675	Control Overlay	Models HWNSX2PP112TQ01, HWNSX2PP112TW01 and HWNSX2SP112CW01
	201667	Control Overlay	Models SWNSX1PP112TQ01, SWNSX1PP112TW01, SWNSX1SP112TQ01 and SWNSX1SP112TW01
	201935	Control Overlay	Model GWNSX2PP112TW01
	201999	Graphic Overlay	Model BWNSX2PP112CW01
	204005	Control Overlay	Model PWNSX2PP112TG02
15	24205	Nut	
16	39897	Switch Knob	
17	36520DG	Control Panel and Bracket Assembly	Gray; Model PWNSX2PP112TG02
	36521WP	Control Panel and Bracket Assembly	White; All other models
	36521QP	Control Panel and Bracket Assembly	Bisque; All other models
18	D500226	Screw	Phillips head
	35528	Screw	Torx head
19	27761	Switch	Models BWNSX2PP112CW01, GWNSX2PP112TW01, HWNSX2PP112TQ01, HWNSX2PP112TW01, HWNSX2SP112CW01, PWNSX2PP112TG02, SWNSX2PP112TQ01, SWNSX2PP112TW01, SWNSX2PP112TW02, SWNSX2SP112TW02, SWNSX2SP112TW01 and SWNSX2SP112TW02
	201686	Cycle Selector Switch	All other models
20	201686	Cycle Selector Switch	Models BWNSX2PP112CW01, GWNSX2PP112TW01, HWNSX2PP112TQ01, HWNSX2PP112TW01, HWNSX2SP112CW01, PWNSX2PP112TG02, SWNSX2PP112TQ01, SWNSX2PP112TW01, SWNSX2PP112TW02, SWNSX2SP112TW02, SWNSX2SP112TW01 and SWNSX2SP112TW02
21	02431	Washer	
22	44087101	Nut	

Control Panel, Control Hood and Controls (Drawing 4 of 12)

Models GWNSX1PP302AW01, GWNSX2PP302AW01, GWNSX2PP302NW01, NWNSX2SP302NW22, SWNSX1PP302AW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX1SP302SQ01, SWNSX1SP302SW01, SWNSX1SP302SW01, and SWNSX1SP542NW22

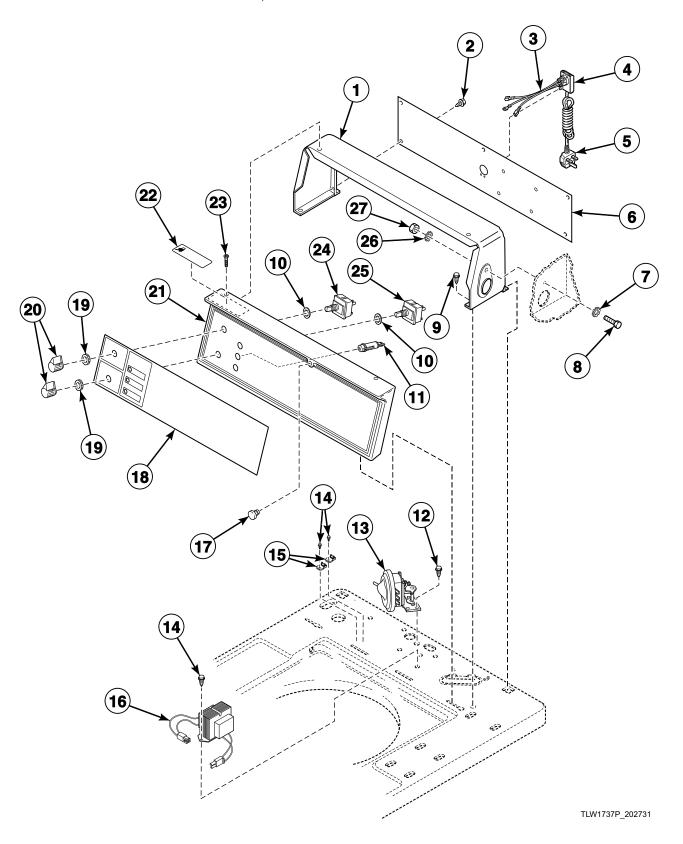


Control Panel, Control Hood and Controls (Drawing 4 of 12)

1 37075W Control Hood White 37075Q Control Hood Bisque	REF	PART NO.	DESCRIPTION	COMMENTS
2 23222 Screw Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01, SWNSX1PP302AW01, SWNSX1SP302BW01 and SWNSX1SP302DW01 4 39922 Cable Connection Box Models GWNSX1PP302AW01, SWNSX1SP302DW01 4 39922 Cable Connection Box Models GWNSX1PP302AW01, GWNSX2PP302DW01 5 39926 Lead-In Cord Models GWNSX1PP302AW01, GWNSX2PP302AW01 39931 Power Cord Assembly Models GWNSX1PP302AW01 and SWNSX1SP302UW01 39984 Power Cord Assembly Models GWNSX1PP302AW01 and SWNSX1SP302AW01 39984 Power Cord Assembly Models GWNSX1PP302AW01 and SWNSX1SP302AW01 39984 Power Cord Assembly Models GWNSX1PP302AW01 39984 Power Cord Assembly Models GWNSX1PP302AW01 4 203074 Rear Panel Models GWNSX1PP302AW01 39920 Hood Back Panel All other models 7 M400017 Washer 8 02916 Screw 9 DS0108B Screw 10 91176 Washer 11 80131 Light 12 203661 <th>1</th> <th>37075W</th> <th>Control Hood</th> <th>White</th>	1	37075W	Control Hood	White
3 39923 Lead-In Wire Hamess Assembly		37075Q	Control Hood	Bisque
SWNSX1P9302AW01, SWNSX1SP302W01 39922	2	23222	Screw	
SWNSX1P9302AW01, SWNSX1SP302AW01 SWNSX1SP302BW01 and SWNSX1SP302UW01 39931	3	39923	Lead-In Wire Harness Assembly	SWNSX1PP302AW01, SWNSX1SP302AW01,
39931 Power Cord Assembly Models GWNSX1P302AW01, GWNSX2P9302AW01	4	39922	Cable Connection Box	SWNSX1PP302AW01, SWNSX1SP302AW01,
SWNSX1P93028W01 and SWNSX1SP302BW01	5	39926	Lead-In Cord	Model SWNSX1SP302UW01
Rear Panel		39931	Power Cord Assembly	
SWNSX1PP302AW01 and SWNSX1SP302AW01		39984	Power Cord Assembly	Model SWNSX1SP302BW01
SWNSX1SP302UW01	6	203074	Rear Panel	
7 M400017 Washer 8 02916 Screw 9 D501086 Screw 10 91176 Washer 11 801431 Light 12 23962 Screw 13 202655 Pressure Switch 14 D503661 Screw 15 210100 Resistor 16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper Extra thick 18 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Model NWNSX2SP302NW22 201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 201935 Control Overlay All other models 19 24205 Nut 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Model		39920	Hood Back Panel	
8		38267	Hood Back Panel	All other models
9 D501086 Screw	7		Washer	
10 91176 Washer 11 801431 Light 12 23962 Screw 13 202655 Pressure Switch 14 D503661 Screw 15 210100 Resistor 16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper Extra thick 18 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Model GWNSX2PP302NW02 201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 and GWNSX2PP302AW01 19 24205 Nut 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 20 39897 Switch Knob Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01 and SWNSX1SP302AW01 and NWNSX2SP302AW01 23	8			
11 801431 Light 12 23962 Screw 13 202655 Pressure Switch 14 D503661 Screw 15 210100 Resistor 16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper M400795 Bumper Extra thick 18 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 201935 Control Overlay All other models 19 24205 Nut 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 23 D500226 Screw Phillips head 36528 Screw Phillips head 376528 Switch <				
12 23962 Screw 13 202655 Pressure Switch 14 D503661 Screw 15 210100 Resistor 16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper Extra thick 18 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Model SWNSX2PP302AW02 201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 201667 Control Overlay All other models 19 24205 Nut 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01, GWNSX2PP302AW01, and NWNSX2SP302NW02 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302AW01, GWNSX2PP302NW01 and				
13 202655 Pressure Switch 14 D503661 Screw 15 210100 Resistor 16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper Extra thick M400795 Bumper Extra thick 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 and GWNSX2PP302AW01 and GWNSX2PP302AW01 and GWNSX2PP302AW01 and GWNSX2PP302AW01 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01 23 D500226 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302AW01 and NWNSX2SP302NW02 25 201686 Cycle Selector Switch All other models 36 Cycle Selector Swit				
14 D503661 Screw 15 210100 Resistor 16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper Extra thick 18 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Models GWNSX2P9302NW22 201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 201667 Control Overlay All other models 19 24205 Nut 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302AW01 and NWNSX2SP302NW02 25 201686 Cycle Selector Switch All other models 26 <th></th> <th></th> <th></th> <th></th>				
15 210100 Resistor 16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper Extra thick 18 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Models GWNSX2PP302AW022 201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 201667 Control Overlay All other models 19 24205 Nut 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW02 25 201686 Cycle Selector Switch				
16 201616P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper M400795 Bumper Extra thick 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Models GWNSX2PP302NW22 201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 and GWNSX2PP302AW01 20 201667 Control Overlay All other models 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01, SWNSX1PP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch <t< th=""><th></th><th></th><th></th><th></th></t<>				
transformer. Discard jumper wire when replacing transformer. 17 202469 Control Panel Bumper Extra thick 18 201937 Control Overlay Model GWNSX1PP302AW01 202130 Control Overlay Models GWNSX2PP302NW22 201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302AW01 and GWNSX2PP302AW01 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW02 25 201686 Cycle Selector Switch All other models 26 02431 Washer				
M400795 Bumper Extra thick	16	201616P	Transformer	transformer. Discard jumper wire when replacing
18	17	202469	Control Panel Bumper	
202130		M400795	Bumper	Extra thick
201935 Control Overlay Models GWNSX2PP302AW01 and GWNSX2PP302NW01	18	201937	Control Overlay	Model GWNSX1PP302AW01
GWNSX2PP302NW01		202130	Control Overlay	Model NWNSX2SP302NW22
19 24205 Nut 20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer		201935	Control Overlay	
20 39897 Switch Knob 21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer		201667	Control Overlay	All other models
21 36521WP Control Panel and Bracket Assembly White 36521QP Control Panel and Bracket Assembly Bisque 22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer	19			
36521QP	20	39897	Switch Knob	
22 D511021 Shock Warning Label Models GWNSX1PP302AW01, GWNSX2PP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer	21		-	
SWNSX1PP302AW01 and SWNSX1SP302AW01 23 D500226 Screw Phillips head 35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer		· · · · · · · · · · · · · · · · · · ·		•
35528 Screw Torx head 24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer	22		Shock Warning Label	SWNSX1PP302AW01 and SWNSX1SP302AW01
24 27761 Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer	23			•
and NWNSX2SP302NW22 201686 Cycle Selector Switch All other models 25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer				
25 201686 Cycle Selector Switch Models GWNSX2PP302AW01, GWNSX2PP302NW01 and NWNSX2SP302NW22 26 02431 Washer	24			and NWNSX2SP302NW22
and NWNSX2SP302NW22 26 02431 Washer				
			•	
27 44087101 Nut	26	02431	Washer	
	27	44087101	Nut	

Control Panel, Control Hood and Controls (Drawing 5 of 12)

Models GWNSX1PP302EW09, HWNSX1SP302UW09 and SWNSX1SP302EW09

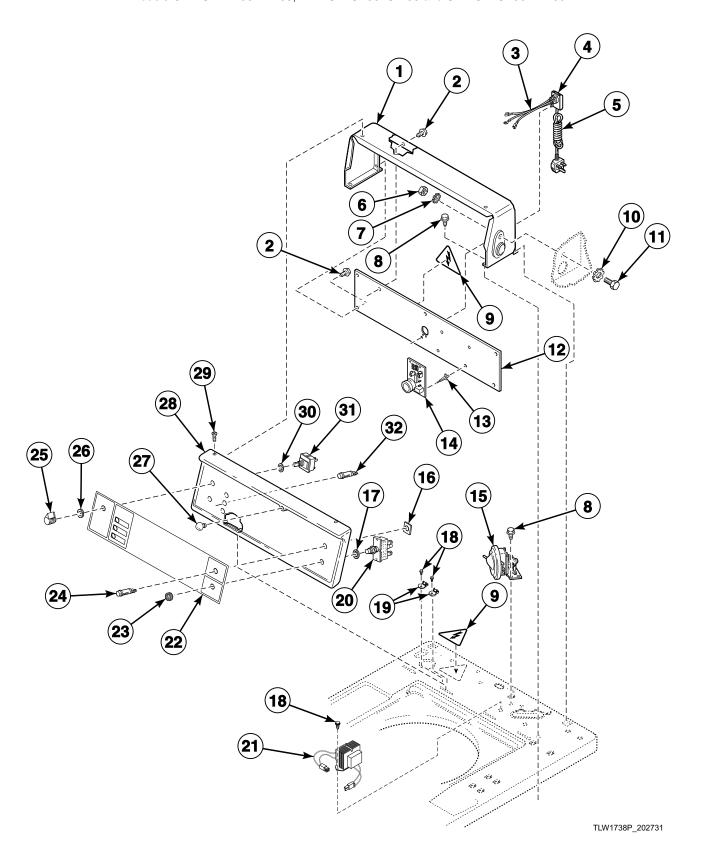


Control Panel, Control Hood and Controls (Drawing 5 of 12)

1 37075W Control Hood	REF	PART NO.	DESCRIPTION	COMMENTS
3	1	37075W	Control Hood	
4 39922 Cable Connection Box Models GWNSX1PP302EW09 and SWNSX1SP302EW09 5 39926 Lead-In Cord Model HWNSX1SP302EW09 6 44087101 Nut Model HWNSX1SP302UW09 6 44087101 Nut Model HWNSX1SP302UW09 8 23962 Screw 9 F8211201 Electrical Shock Label 10 M400017 Washer 11 02916 Screw 12 39920 Hood Back Panel 13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay	2	23222	Screw	
5 39925 Power Cord Assembly Models GWNSX1SP302EW09 39926 Lead-In Cord Model HWNSX1SP302EW09 6 44087101 Nut 7 02431 Washer 8 23962 Screw 9 F8211201 Electrical Shock Label 10 M400017 Washer 11 02916 Screw 12 39920 Hood Back Panel 13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202402 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay	3	201405P	Lead-In Wire Harness Assembly	Model HWNSX1SP302UW09
SWNSX1SP302EW09	4	39922	Cable Connection Box	
6 44087101 Nut 7 02431 Washer 8 23962 Screw 9 F8211201 Electrical Shock Label 10 M400017 Washer 11 02916 Screw 12 39920 Hood Back Panel 13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202022 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light	5	39925	Power Cord Assembly	
7 02431 Washer 8 23962 Screw 9 F8211201 Electrical Shock Label 10 M400017 Washer 11 02916 Screw 12 39920 Hood Back Panel 13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob		39926	Lead-In Cord	Model HWNSX1SP302UW09
8 23962 Screw 9 F8211201 Electrical Shock Label 10 M400017 Washer 11 02916 Screw 12 39920 Hood Back Panel 13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 58882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1P302EW09 202022 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut	6	44087101	Nut	
9 F8211201 Electrical Shock Label	7	02431	Washer	
10	8	23962	Screw	
11 02916 Screw 12 39920 Hood Back Panel 13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201618P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Brack	9	F8211201	Electrical Shock Label	
12 39920 Hood Back Panel 13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226	10	M400017	Washer	
13 D501523 Circuit Board Support 14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528	11	02916	Screw	
14 37225P Control Lid Lock Assembly 15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model HWNSX1SP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security	12	39920	Hood Back Panel	
15 202655 Pressure Switch 16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	13	D501523	Circuit Board Support	
16 34762 Push-On Clip 17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	14	37225P	Control Lid Lock Assembly	
17 F430339 Washer 18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	15	202655	Pressure Switch	
18 D503661 Screw 19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model HWNSX1SP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	16	34762	Push-On Clip	
19 210100 Resistor 20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model HWNSX1SP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	17	F430339	Washer	
20 55882 Switch Assembly 21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	18	D503661	Screw	
21 201616P Transformer 22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	19	210100	Resistor	
22 201673 Control Overlay Model SWNSX1SP302EW09 202022 Control Overlay Model GWNSX1PP302EW09 202408 Control Overlay Model HWNSX1SP302UW09 23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	20	55882	Switch Assembly	
202022 Control Overlay Model GWNSX1PP302EW09	21	201616P	Transformer	
202408 Control Overlay Model HWNSX1SP302UW09	22	201673	Control Overlay	Model SWNSX1SP302EW09
23 52947 Nut 24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 3528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch		202022	Control Overlay	Model GWNSX1PP302EW09
24 39536 Lid Switch Indicator Light 25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch		202408	Control Overlay	Model HWNSX1SP302UW09
25 39897 Switch Knob 26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	23	52947	Nut	
26 24205 Nut 27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	24	39536	Lid Switch Indicator Light	
27 202469 Control Panel Bumper M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	25	39897	Switch Knob	
M400795 Bumper Extra thick 28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	26	24205	Nut	
28 36521WP Control Panel and Bracket Assembly 29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	27	202469	Control Panel Bumper	
29 D500226 Screw Phillips head 35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch		M400795	Bumper	Extra thick
35528 Screw Torx head; Optional for added security 30 91176 Washer 31 201686 Cycle Selector Switch	28	36521WP	Control Panel and Bracket Assembly	
30 91176 Washer 31 201686 Cycle Selector Switch	29	D500226	Screw	Phillips head
31 201686 Cycle Selector Switch		35528	Screw	Torx head; Optional for added security
·	30	91176	Washer	
32 801431 Light				
	32	801431	Light	

Control Panel, Control Hood and Controls (Drawing 6 of 12)

Models BWNBC2PP112TW01, BWNBX2PP112TW01, HWNBC2PP112TQ01, HWNBC2PP112TW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBX1SP122DW01, HWNBX2SP112CW01, HWNBX2SP112FW28, NWNBX2SP302NW22, PWNBC2PP112TG02, PWNBX2PP112TG02, SWNBC2PP112TQ01, SWNBC2PP112TW01, SWNBC2PP112TW02, SWNBC2SP112TQ01, SWNBC2SP112TW01, SWNBX1SP122DW01, SWNBX2SP112TW02, SWNBX2SP082JW01, SWNBX2SP112FW27, SWNBX2SP112TQ01, SWNBX2SP112TW01, SWNBX2SP302NQ22, SWNBX2SP302NW22 and TWNBX2SP302NW22

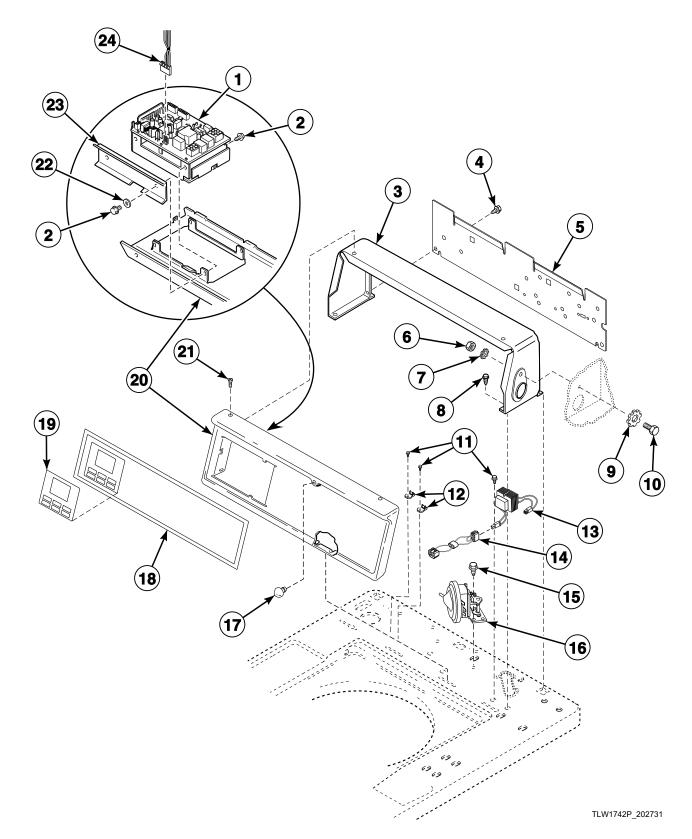


Control Panel, Control Hood and Controls (Drawing 6 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
1	202831P	Control Assembly	Models BWNBC2PP112TW01 and BWNBX2PP112TW01
	202392P	Control Assembly	All other models
2	D501524	Screw	
3	37075W	Control Hood	White
	37075Q	Control Hood	Bisque
	37075DG	Control Hood	Dark gray
4	23222	Screw	
5	38267	Hood Back Panel	
6	44087101	Nut	
7	02431	Washer	
8	D501086	Screw	
9	M400017	Washer	
10	02916	Screw	
11	D503661	Screw	
12	210100	Resistor	Models NWNBX2SP302NW22, SWNBX2SP302NQ22, SWNBX2SP302NW22 and TWNBX2SP302NW22
13	803527P	Transformer	Models NWNBX2SP302NW22, SWNBX2SP082JW01,
			SWNBX2SP302NQ22, SWNBX2SP302NW22 and
			TWNBX2SP302NW22
	201375P	Transformer	Some models may have jumper wire attached to transformer. Discard
			jumper wire when replacing transformer.; Models BWNBX2PP112TW01,
			HWNBE2SP112CW01, HWNBX2SP112CW01, HWNBX2SP112FW28,
			PWNBX2PP112TG02, SWNBX2PP112TW02, SWNBX2SP112FW27,
			SWNBX2SP112TQ01 and SWNBX2SP112TW01
	210018P	Transformer	All other models
14	M413507	Jumper Configuration	Models NWNBX2SP302NW22, SWNBX2SP302NQ22,
		Assembly	SWNBX2SP302NW22 and TWNBX2SP302NW22
15	23962	Screw	
16	202655	Pressure Switch	
17	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
18	202174	Overlay	Models NWNBX2SP302NW22 and TWNBX2SP302NW22
	805914	Label	Model TWNBX2SP302NW22
	200918	Overlay	Models SWNBC2PP112TQ01, SWNBC2PP112TW01,
			SWNBC2PP112TW02, SWNBC2SP112TQ01, SWNBC2SP112TW01,
			SWNBX1SP122DW01, SWNBX2PP112TW02, SWNBX2SP082JW01,
			SWNBX2SP112FW27, SWNBX2SP112TQ01, SWNBX2SP112TW01,
			SWNBX2SP302NQ22 and SWNBX2SP302NW22
	200919	Overlay	Models HWNBC2PP112TQ01, HWNBC2PP112TW01,
			HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01,
			HWNBX1SP122DW01, HWNBX2SP112CW01 and
	000000	Overalla v	HWNBX2SP112FW28 Models BWNBC2PP112TW01 and BWNBX2PP112TW01
	202098	Overlay	
	203526	Overlay	Models PWNBC2PP112TG02 and PWNBX2PP112TG02
19	202310	Overlay	French/English; Models HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01 and HWNBX2SP112CW01
20	210042W	Control Panel	White
		Assembly	
	210042Q	Control Panel	Bisque
	04004000	Assembly	
	210042DG	Control Panel	Dark gray
	50001	Assembly	DUW 1
21	52864	Screw	Phillips head
	35528	Screw	Torx head
22	200608	Washer	
23	210053	Control Shield	
24	D511478	Central Pay Harness	

Control Panel, Control Hood and Controls (Drawing 7 of 12) Models BWNBX2PP302AW01, HWNBX1SP122DW01, HWNBX1SP542DW01, PWNBX2PP302AG02,

SWNBX1SP122DW01, SWNBX1SP542DW01 and SWNBX2SP302AW01

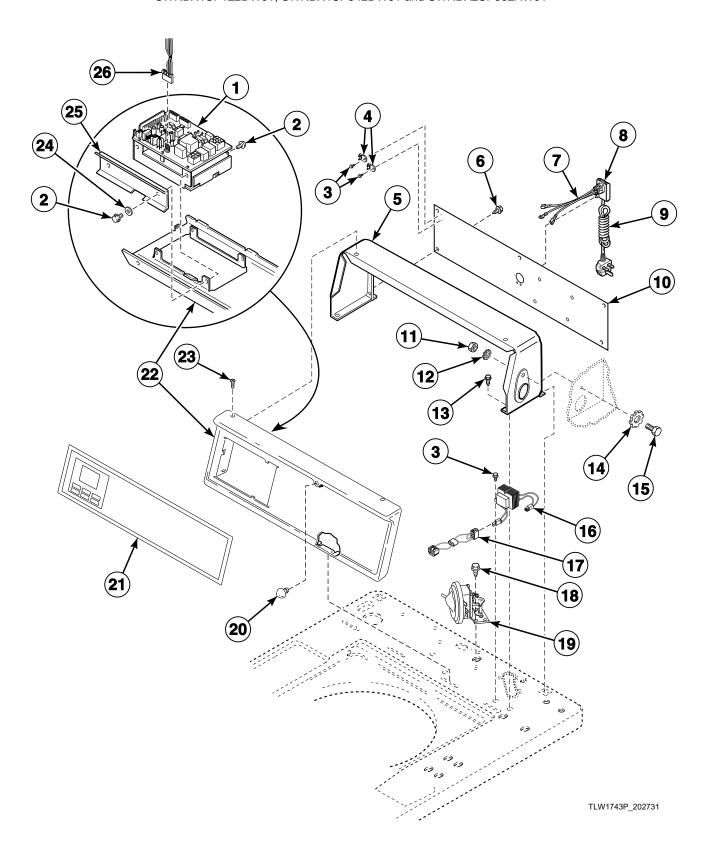


Control Panel, Control Hood and Controls (Drawing 7 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
1	202831P	Control Assembly	Model BWNBX2PP302AW01
	202392P	Control Assembly	All other models
2	D501524	Screw	
3	D503661	Screw	
4	210100	Resistor	Models BWNBX2PP302AW01, HWNBX1SP542DW01, SWNBX1SP542DW01 and SWNBX2SP302AW01
5	37075W	Control Hood	White
	37075DG	Control Hood	Dark gray
6	23222	Screw	
7	39923	Lead-In Wire Harness Assembly	Models BWNBX2PP302AW01, PWNBX2PP302AG02 and SWNBX2SP302AW01
	201405P	Lead-In Wire Harness Assembly	All other models
8	39922	Cable Connection Box	
9	39931	Power Cord Assembly	Models BWNBX2PP302AW01, PWNBX2PP302AG02 and SWNBX2SP302AW01
	804556	Lead-In Cord Assembly	All other models
10	203074	Rear Panel	Models BWNBX2PP302AW01, PWNBX2PP302AG02 and SWNBX2SP302AW01
	39920	Hood Back Panel	All other models
11	44087101	Nut	
12	02431	Washer	
13	D501086	Screw	
14	M400017	Washer	
15	02916	Screw	
16	803527P	Transformer	Models BWNBX2PP302AW01, PWNBX2PP302AG02 and SWNBX2SP302AW01
	201375P	Transformer	All other models
17	M413507	Jumper Configuration Assembly	Models BWNBX2PP302AW01, HWNBX1SP542DW01, PWNBX2PP302AG02, SWNBX1SP542DW01 and SWNBX2SP302AW01
18	23962	Screw	
19	202655	Pressure Switch	
20	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
21	200919	Overlay	Models HWNBX1SP122DW01 and HWNBX1SP542DW01
	202098	Overlay	Model BWNBX2PP302AW01
	203526	Overlay	Model PWNBX2PP302AG02
	200918	Overlay	All other models
22	210042W	Control Panel Assembly	White
	210042DG	Control Panel Assembly	Dark gray
23	52864	Screw	
24	200608	Washer	
25	210053	Control Shield	
26	D511478	Central Pay Harness	

Control Panel, Control Hood and Controls (Drawing 8 of 12)

Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLE2SP112CW01, HWNLX2HP112CW01, HWNLX2SP112CW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLC2PP112TW01, SWNLC2PP112TW02, SWNLC2SP112TQ01, SWNLC2SP112TW01, SWNLC2SP112TW02, SWNLX1SP542NW23, SWNLX2AP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW02, SWNLX2SP112TW02, SWNLX2SP112TW01 and SWNLX2SP112TW02

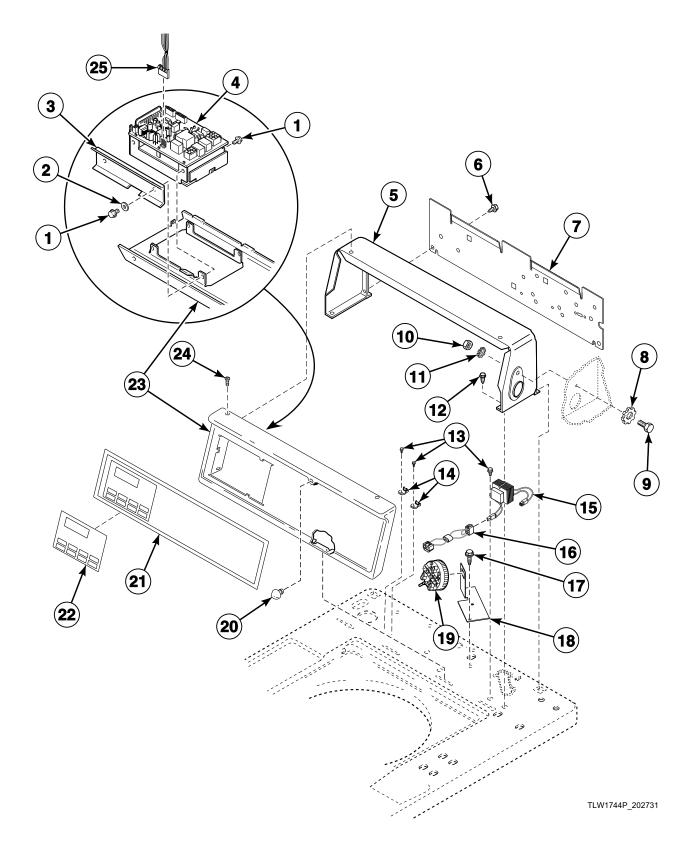


Control Panel, Control Hood and Controls (Drawing 8 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
	202828	Options Label	English
	202829	Options Label	Spanish
	NK201	Network Retrofit Kit	Wired
	NK220	Network Controller Kit	Wired
	NK301	Wireless Network Kit	
	NK320	Ethernet Gateway Kit	Wireless
	NK330	USB Gateway Kit	Wireless
1	D501524	Screw	
2	200608	Washer	
3	210053	Control Shield	
4	202820P	Control Assembly	Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLX2HP112CW01, SWNLC2AP112TW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TW02, SWNLX2AP112TW02, SWNLX2HP112TW01 and SWNLX2HP112TW02
	202391P	Control Assembly	All other models
5	37075Q	Control Hood	Model SWNLC2SP112TQ01
	37075W	Control Hood	All other models
6	23222	Screw	
7	38267	Hood Back Panel	
8	M400017	Washer	
9	02916	Screw	
10	44087101	Nut	
11	02431	Washer	
12	D501086	Screw	
13	D503661	Screw	
14	210100	Resistor	Model SWNLX1SP542NW23
15	201375P	Transformer	Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer; Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLE2SP112CW01, HWNLX2HP112CW01, HWNLX2SP112CW01, SWNLX2AP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW02, SWNLX2PP112TW02, SWNLX2SP112TW01 and SWNLX2SP112TW02
	803527P	Transformer	Model SWNLX1SP542NW23
	210018P	Transformer	All other models
16	M413507	Jumper Configuration Assembly	Model SWNLX1SP542NW23
17	23962	Screw	
18	201789	Pressure Switch Bracket	
19	803637	Pressure Switch	2 level; Service only switch
	803638P	Pressure Switch	3 level
20	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
21	202417	Control Overlay	Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLE2SP112CW01, HWNLX2HP112CW01 and HWNLX2SP112CW01
	202416	Control Panel Overlay	All other models
22	202309	Control Sticker Overlay	French/English; Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLE2SP112CW01, HWNLX2HP112CW01 and HWNLX2SP112CW01
23	210042Q	Control Panel Assembly	Models SWNLC2HP112TQ01 and SWNLC2SP112TQ01
	210042W	Control Panel Assembly	All other models
24	52864	Screw	Phillips head
	35528	Screw	Torx head
25	D511478	Central Pay Harness	

Control Panel, Control Hood and Controls (Drawing 9 of 12)

Models HWNLX1SP122DW01, HWNLX1SP542DW01, SWNLX1SP122DW01, SWNLX1SP542DW01 and SWNLX2SP302AW01

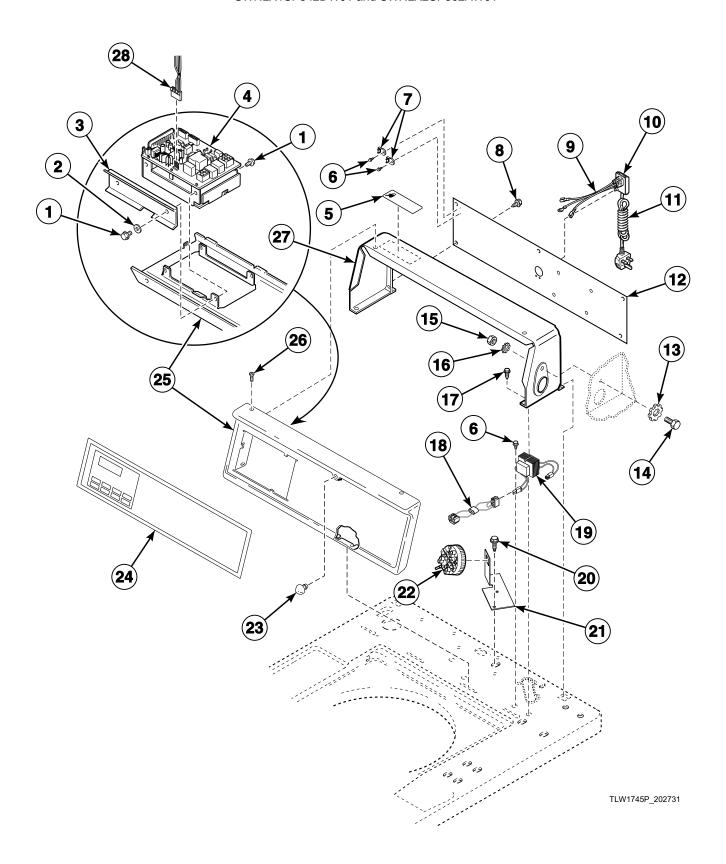


Control Panel, Control Hood and Controls (Drawing 9 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
	202829	Options Label	Spanish
	NK201	Network Retrofit Kit	Wired
	NK220	Network Controller Kit	Wired
	NK301	Wireless Network Kit	
	NK320	Ethernet Gateway Kit	Wireless
	NK330	USB Gateway Kit	Wireless
1	D501524	Screw	
2	200608	Washer	
3	210053	Control Shield	
4	202391P	Control Assembly	
5	D511021	Shock Warning Label	
6	D503661	Screw	
7	210100	Resistor	Models HWNLX1SP542DW01, SWNLX1SP542DW01 and SWNLX2SP302AW01
8	23222	Screw	
9	201405P	Lead-In Wire Harness Assembly	
10	39922	Cable Connection Box	
11	39931	Power Cord Assembly	Model SWNLX2SP302AW01
	804556	Lead-In Cord Assembly	All other models
12	39920	Hood Back Panel	Model SWNLX2SP302AW01 through Serial No. 1404009800; All other models
	203074	Rear Panel	Model SWNLX2SP302AW01 starting Serial No. 1404009801
13	M400017	Washer	
14	02916	Screw	
15	44087101	Nut	
16	02431	Washer	
17	D501086	Screw	
18	M413507	Jumper Configuration Assembly	Models HWNLX1SP542DW01, SWNLX1SP542DW01 and SWNLX2SP302AW01
19	803527P	Transformer	Models HWNLX1SP542DW01, SWNLX1SP542DW01 and SWNLX2SP302AW01
	201375P	Transformer	All other models
20	23962	Screw	
21	201789	Pressure Switch Bracket	
22	803638P	Pressure Switch	
	803637	Pressure Switch	Use for higher water level
23	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
24	202417	Control Overlay	Models HWNLX1SP122DW01 and HWNLX1SP542DW01
	202416	Control Panel Overlay	All other models
25	210042W	Control Panel Assembly	
26	52864	Screw	Phillips head
	35528	Screw	Torx head
		Control Hood	
27	37075W	CONTROL	

Control Panel, Control Hood and Controls (Drawing 10 of 12) Models BWNBY2PP112TW01, HWNBY2PP112TW01, HWNBY2SP112CW01,

SWNBY2PP112TW01 and SWNBY2SP112TW01

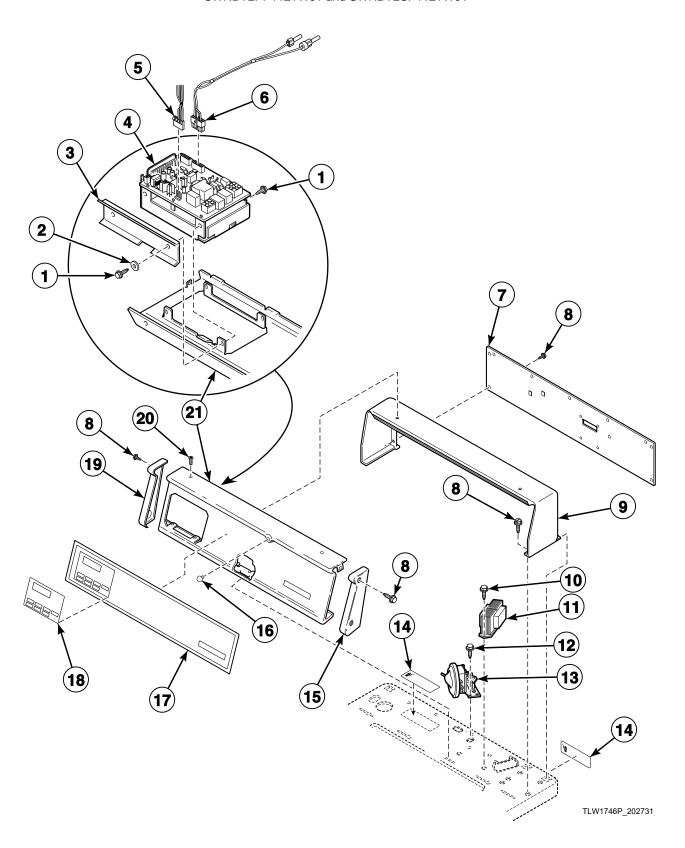


Control Panel, Control Hood and Controls (Drawing 10 of 12)

REF	PART NO.	DESCRIPTION	COMMENTS
1	D501524	Screw	
2	200608	Washer	
3	210053	Control Shield	
4	202831P	Control Assembly	Model BWNBY2PP112TW01
	202392P	Control Assembly	All other models
5	D511478	Central Pay Harness	
6	800680	Diagnostic Wire Harness Assembly	
7	210143	Rear Panel	
8	D501086	Screw	
9	210142W	Control Hood	
10	D503661	Screw	
11	201375P	Transformer	Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer
12	23962	Screw	
13	202655	Pressure Switch	
14	D505281	Disconnect Power Warning Label	Models BWNBY2PP112TW01, SWNBY2PP112TW01 and SWNBY2SP112TW01
	D500316	Warning Label	Models HWNBY2PP112TW01 and HWNBY2SP112CW01
15	210108W	End Cap	Right
16	202469	Control Panel Bumper	
	M400795	Bumper	Extra thick
17	201003	Control Panel Overlay	Models BWNBY2PP112TW01, SWNBY2PP112TW01 and SWNBY2SP112TW01
	201007	Control Panel Overlay	Models HWNBY2PP112TW01 and HWNBY2SP112CW01
18	202310	Overlay	French/English; Models HWNBY2PP112TW01 and HWNBY2SP112CW01
	202832	Overlay	Model BWNBY2PP112TW01
19	210109W	End Cap	Left
20	52864	Screw	
21	210137W	Control Panel Assembly	

Control Panel, Control Hood and Controls (Drawing 11 of 12) Models HWNLY2HP112CW01, HWNLY2SP112CW01, SWNLY2AP112TW01, SWNLY2HP112TW01,


SWNLY2PP112TW01, SWNLY2SP112TW01 and SWNLY2SP302NW22

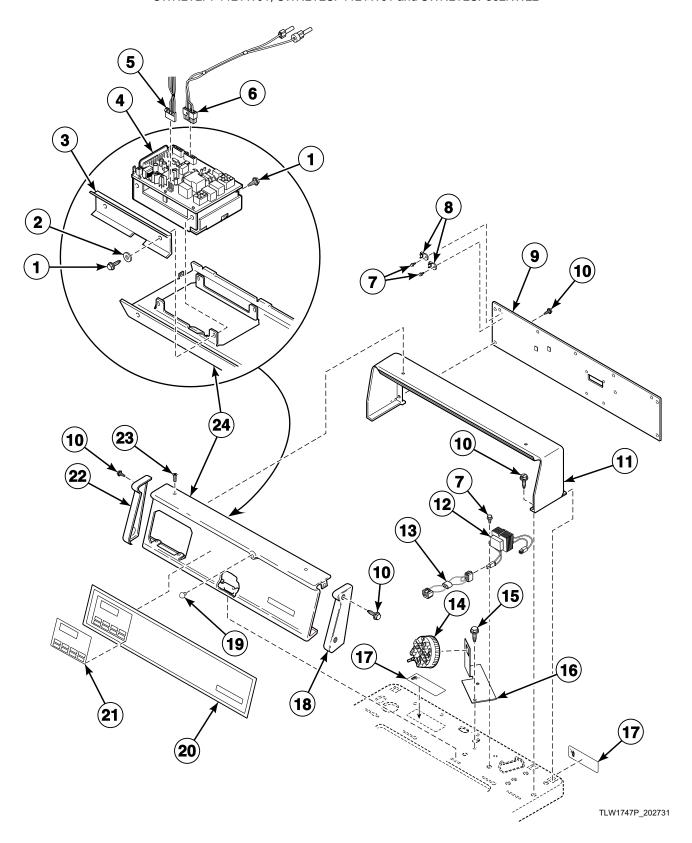

Control Panel, Control Hood and Controls (Drawing 11 of 12)

202829	REF	PART NO.	DESCRIPTION	COMMENTS
NK220		202829	Options Label	Spanish
NK301 Wireless Network Kit NK320 Ethernet Gateway Kit Wireless		NK201	Network Retrofit Kit	Wired
NK320		NK220	Network Controller Kit	Wired
NK330		NK301	Wireless Network Kit	
1 D501524 Screw Washer		NK320	Ethernet Gateway Kit	Wireless
2 200608 Washer 3 210053 Control Shield 4 202820P Control Assembly Models HWNLY2HP112CW01, SWNLY2AP112TW01 and SWNLY2HP112TW01 5 D511478 Central Pay Harness 6 800680 Diagnostic Wire Harness Assembly 7 D503661 Screw Model SWNLY2SP302NW22 8 210100 Resistor Model SWNLY2SP302NW22 9 210143 Rear Panel 10 D501086 Screw 11 210142W Control Hood 12 803527P Transformer Model SWNLY2SP302NW22 201375P Transformer Model SWNLY2SP302NW22 201375P Transformer Model SWNLY2SP302NW22 13 M413507 Jumper Configuration Assembly 14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW01 803638P Pressure Switch All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17		NK330	USB Gateway Kit	Wireless
3	1	D501524	Screw	
## Page	2	200608	Washer	
SWNLY2AP112TW01 and SWNLY2HP112TW01	3	210053	Control Shield	
5 D511478 Central Pay Harness 6 800680 Diagnostic Wire Harness Assembly 7 D503661 Screw Model SWNLY2SP302NW22 8 210100 Resistor Model SWNLY2SP302NW22 9 210143 Rear Panel 10 D501086 Screw 11 210142W Control Hood 12 803527P Transformer Model SWNLY2SP302NW22 201375P Transformer Model SWNLY2SP302NW22 201375P Transformer Some models may have jumper wire attached to transformer, is all other models and transformer. Isolard jumper wire when replacing transformer.; All other models 13 M413507 Jumper Configuration Assembly 14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW01 803638P Pressure Switch All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 18 210108W End Cap	4	202820P	Control Assembly	
6 800680 Diagnostic Wire Harness Assembly 7 D503661 Screw Model SWNLY2SP302NW22 8 210100 Resistor Model SWNLY2SP302NW22 9 210143 Rear Panel 10 D501086 Screw 11 210142W Control Hood 12 803527P Transformer Model SWNLY2SP302NW22 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer.; All other models 13 M413507 Jumper Configuration Assembly 14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and HWNLY2SP112CW01 and HWNLY2SP112CW01 and HWNLY2SP112CW01 and HWNLY2SP112CW01 15 23962 Screw 16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20		202391P	Control Assembly	All other models
7 D503661 Screw Model SWNLY2SP302NW22 8 210100 Resistor Model SWNLY2SP302NW22 9 210143 Rear Panel 10 D501086 Screw 11 210142W Control Hood 203527P Transformer Model SWNLY2SP302NW22 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer. Discard jumper wire when replacing transformer. Discard jumper wire when replacing transformer. All other models 13 M413507 Jumper Configuration Assembly 14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW01 and SWNLY2HP112TW01 and SWNLY2AP112TW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and HWNLY2SP112CW01 15 23962 Screw 16 201789 Pressure Switch Bracket Models HWNLY2HP112CW01 and HWNLY2SP112CW01 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 202418 Control Overlay	5	D511478	Central Pay Harness	
8 210100 Resistor Model SWNLY2SP302NW22 9 210143 Rear Panel 10 D501086 Screw 11 210142W Control Hood 12 803527P Transformer Model SWNLY2SP302NW22 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer.; All other models 13 M413507 Jumper Configuration Assembly 14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and SWNLY2HP112TW01 and HWNLY2SP112CW01 15 23962 Screw 16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 4 4 202309 Control Overlay All other models 2 20	6	800680	Diagnostic Wire Harness Assembly	
9 210143 Rear Panel 10 D501086 Screw 11 210142W Control Hood 12 803527P Transformer Model SWNLY2SP302NW22 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer.; All other models 13 M413507 Jumper Configuration Assembly 14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW01 803638P Pressure Switch All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 4 Models HWNLY2SP112CW01 All other models 20 202415 Control Overlay Models HWNLY2HP112CW01 and HWNLY2BP112CW01 4 <t< th=""><th>7</th><th>D503661</th><th>Screw</th><th>Model SWNLY2SP302NW22</th></t<>	7	D503661	Screw	Model SWNLY2SP302NW22
10	8	210100	Resistor	Model SWNLY2SP302NW22
11 210142W Control Hood 12 803527P Transformer Model SWNLY2SP302NW22 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer.; All other models 13 M413507 Jumper Configuration Assembly 14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW0¹ SWNLY2AP112TW01 and SWNLY2HP112TW01 803638P Pressure Switch All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 D505281 Disconnect Power Warning Label All other models 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22	9	210143	Rear Panel	
12 803527P Transformer Model SWNLY2SP302NW22 201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer.; All other models 13 M413507 Jumper Configuration Assembly Service only switch; Models HWNLY2HP112CW01 803638P Pressure Switch All other models SWNLY2AP112TW01 and SWNLY2HP112TW01 803638P Pressure Switch All other models All other models 15 23962 Screw Screw 201789 Pressure Switch Bracket Models HWNLY2HP112CW01 and HWNLY2SP112CW01 D505281 Disconnect Power Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 All other models Right 202469 Control Panel Bumper Extra thick Extra thick 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left Left	10	D501086	Screw	
201375P Transformer Some models may have jumper wire attached to transformer. Discard jumper wire when replacing transformer.; All other models	11	210142W	Control Hood	
transformer. Discard jumper wire when replacing transformer.; All other models	12	803527P	Transformer Model SWNLY2SP302NW22	
14 803637 Pressure Switch Service only switch; Models HWNLY2HP112CW01 SWNLY2AP112TW01 and SWNLY2HP112TW01 803638P Pressure Switch All other models 15 23962 Screw 16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 D505281 Disconnect Power Warning Label All other models 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 400795 Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 20 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw		201375P	Transformer	transformer. Discard jumper wire when replacing
SWNLY2AP112TW01 and SWNLY2HP112TW01	13	M413507	Jumper Configuration Assembly	
15 23962 Screw 16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 D505281 Disconnect Power Warning Label All other models 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 20 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw	14	803637	Pressure Switch Service only switch; Models HWNLY2HP1	
16 201789 Pressure Switch Bracket 17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 D505281 Disconnect Power Warning Label All other models 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw		803638P	Pressure Switch	All other models
17 D500316 Warning Label Models HWNLY2HP112CW01 and HWNLY2SP112CW01 D505281 Disconnect Power Warning Label All other models 18 210108W End Cap Right 19 202469 Control Panel Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw	15	23962	Screw	
HWNLY2SP112CW01	16	201789	Pressure Switch Bracket	
18 210108W End Cap Right 19 202469 Control Panel Bumper M400795 Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw	17	D500316	Warning Label	
19 202469 Control Panel Bumper M400795 Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw		D505281	Disconnect Power Warning Label	All other models
M400795 Bumper Extra thick 20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw	18	210108W	End Cap	Right
20 202418 Control Overlay Models HWNLY2HP112CW01 and HWNLY2SP112CW01 202415 Control Overlay All other models 21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw	19	202469	Control Panel Bumper	
HWNLY2SP112CW01		M400795	Bumper	Extra thick
21 202309 Control Sticker Overlay French/English; Models HWNLY2HP112CW01 and HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw	20	202418	Control Overlay	
HWNLY2SP112CW01 22 210109W End Cap Left 23 52864 Screw		202415	Control Overlay	All other models
23 52864 Screw	21	202309		
	22	210109W	End Cap	Left
24 210137W Control Panel Assembly	23	52864	Screw	
	24	210137W	Control Panel Assembly	


Control Panel, Control Hood and Controls (Drawing 12 of 12) Models SWNWY2AP112TW11 and SWNWY2HP112TW11

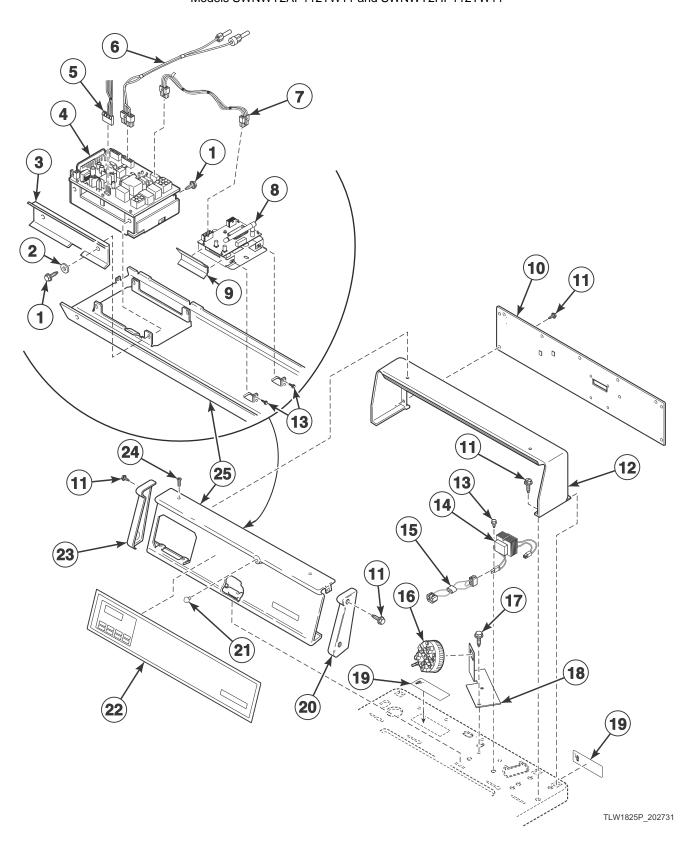

Control Panel, Control Hood and Controls (Drawing 12 of 12)


REF	PART NO.	DESCRIPTION	COMMENTS	
	NK320	Ethernet Gateway Kit	Wireless	
	NK330	USB Gateway Kit	Wireless	
1	D501524	Screw		
2	200608	Washer		
3	210053	Control Shield		
4	202820P	Control Assembly		
5	D511478	Central Pay Harness		
6	800680	Diagnostic Wire Harness Assembly		
7	44088501P	Network Wire Harness Assembly		
8	202335	Wireless Transceiver Assembly		
9	D501441	Electronic Control Shield		
10	210143	Rear Panel		
11	D501086	Screw		
12	210142W	Control Hood		
13	D503661	Screw		
14	201375P	Transformer		
15	M413507	Jumper Configuration Assembly		
16	201789	Pressure Switch Bracket		
17	23962	Screw		
18	803638P	Pressure Switch		
19	D505281	Disconnect Power Warning Label		
20	210108W	End Cap Right		
21	202469	Control Panel Bumper		
	M400795	Bumper Extra thick		
22	202415	Control Overlay		
23	210109W	End Cap	Left	
24	52864	Screw		
25	210137W	Control Panel Assembly		
			·	

All Models Except GWNSX1PP302EW09, HWNSX1SP302UW09 and SWNSX1SP302EW09

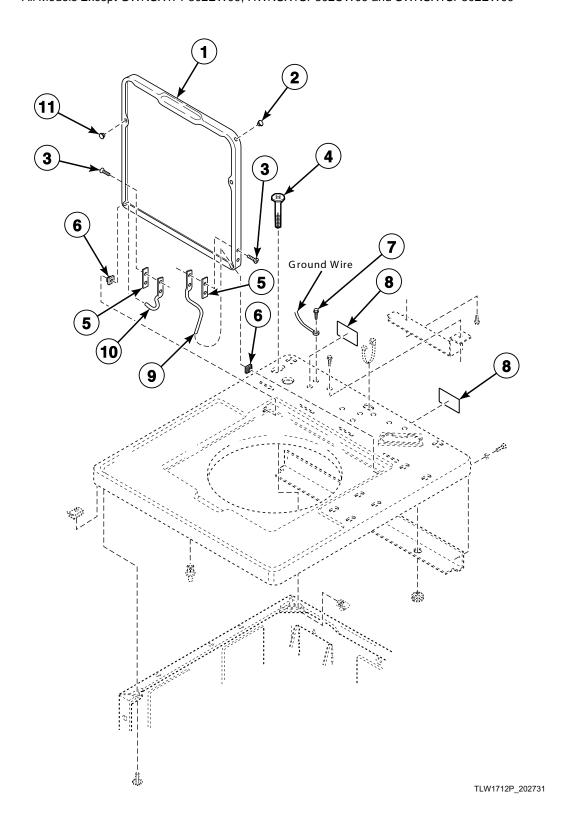

Lid


REF	PART NO.	DESCRIPTION	COMMENTS
1	33450DG	Lid	Models PWNBC2PP112TG02, PWNBX2PP112TG02, PWNBX2PP302AG02 and PWNSX2PP112TG02
	200891Q	Lid	Model HWNBD2SP112CQ01
	201460QP	Lid and Carton Assembly	Models HWNBC2PP112TQ01, SWNBC2PP112TQ01, SWNBC2SP112TQ01, SWNBX2SP112TQ01, SWNBX2SP302NQ22, SWNLC2HP112TQ01 and SWNLC2SP112TQ01
	201761WP	Lid	Models BWNMN2PP112CW01, BWNSX2PP112CW01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNLE2AP112CW01, HWNLE2AP112CW01, HWNLE2SP112CW01, HWNLX2SP112CW01, HWNLX2SP112CW01, HWNLY2SP112CW01, HWNLY2SP112CW01, HWNSX1SP112CW01, HWNSX2SP112CW01, SWNMN2SP112CW01 and UWNMN2SP112CW01
	201760QP	Lid	Bisque; Models HWNSX1PP112TQ01, HWNSX2PP112TQ01, SWNSX1PP112TQ01, SWNSX1SP112TQ01, SWNSX1SP302SQ01, SWNSX2PP112TQ01 and SWNSX2SP112TQ01
	204615W	Lid	White; All other models
2	34153	Lid Plug	Plug not used on all lids
3	34337	Screw	
4	D503673	Screw	Optional; For added security
5	34338	Hinge Gasket	
6	33446	Bushing	
7	52909	Screw	
8	D500316	Warning Label	Models BWNMN2PP112CW01, BWNSX2PP112CW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBE2SP112CW01, HWNBY2SP112CW01, HWNLE2SP112CW01, HWNLE2HP112CW01, HWNLE2SP112CW01, HWNLX2HP112CW01, HWNLX2SP112CW01, HWNLY2HP112CW01, HWNLY2SP112CW01, HWNMN2SP112CW01, HWNMN2SP112CW01, SWNSX2SP112CW01, SWNSX2SP112CW01
	F8211201	Electrical Shock Label	Models HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP122DW01, HWNLX1SP542DW01, SWNBX1SP122DW01, SWNBX1SP542DW01, SWNLX1SP122DW01, SWNLX1SP542DW01 and SWNSX1SP302UW01
	D505281	Disconnect Power Warning Label	All other models
9	36437	Lid Hinge	Right
10	36438	Lid Hinge	Left
11	21685	Bumper	

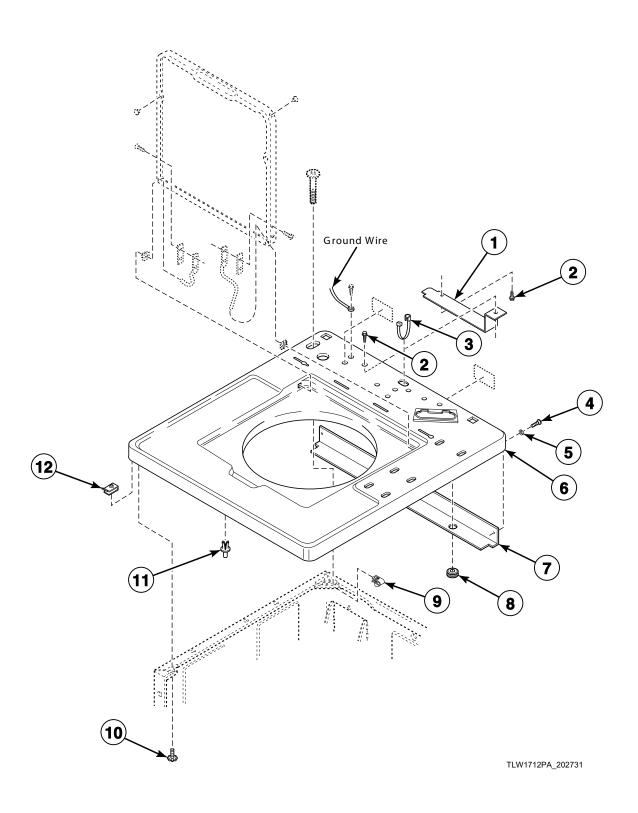

Cabinet Top

REF	PART NO.	DESCRIPTION	COMMENTS
1	202083	Bracket	
2	23962	Screw	
3	38384	Strain Relief	
4	431287	Screw	Models BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01
5	39249	Washer	Models BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01
6	210173WP	Top Assembly	Models BWNBY2PP112TW01, BWNMN2PP112CW01, BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNMN2PP302NW01, GWNMN2PP112TW01, HWNBY2PP112TW01, HWNBY2SP112CW01, HWNLY2HP112CW01, HWNLY2SP112CW01, HWNMN2PP112TW01, HWNMN2SP112CW01, NWNMN1SP542NW22, NWNMN2SP302NW22, SWNBY2PP112TW01, SWNBY2SP112TW01, SWNLY2AP112TW01, SWNLY2HP112TW01, SWNLY2PP112TW01, SWNLY2SP112TW01, SWNLY2SP302NW22, SWNMN1SP302AW01, SWNMN1SP302NW22, SWNMN1SP302SW01, SWNMN2PP112TW01, SWNMN2SP112CW01, SWNMN2SP112TW01, SWNMN2SP112TW08, SWNWY2AP112TW11, SWNWY2HP112TW11 and UWNMN2SP112CW01
	39339W	Top Assembly	Models SWNBX2SP082JW01 and SWNSX1SP302UW01
	203579DG	Тор	Models PWNBC2PP112TG02, PWNBX2PP112TG02, PWNBX2PP302AG02 and PWNSX2PP112TG02
	39167QP	Тор	Models HWNBC2PP112TQ01, HWNBD2SP112CQ01, HWNSX1PP112TQ01, HWNSX2PP112TQ01, SWNBC2PP112TQ01, SWNBC2SP112TQ01, SWNBX2SP112TQ01, SWNBX2SP112TQ01, SWNLC2HP112TQ01, SWNLC2SP112TQ01, SWNSX1PP112TQ01, SWNSX1SP112TQ01, SWNSX1SP302SQ01, SWNSX2PP112TQ01 and SWNSX2SP112TQ01
	39167WP	Тор	All other models
7	39744	Top Shield	Models GWNMN1PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX2PP302AW01, PWNBX2PP302AG02 and SWNSX1SP302UW01; Models BWNBX2PP302AW01, BWNMN2PP302AW01, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01, SWNSX1SP302AW01 and SWNSX1SP302BW01 through Serial No. 1404009800
	202932	Top Shield	Models BWNMN2PP302AW01 and SWNMN1SP302AW01 starting Serial No. 1404009801
	202977	Top Shield	Models BWNBX2PP302AW01, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 starting Serial No. 1404009801
8	80262	Grommet	Models BWNBX2PP302AW01, BWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNSX1PP302AW01, SWNSX1SP302AW01 and SWNSX1SP302BW01
9	27222	Nut	Optional; For added security
10	23008	Screw	
11	56534	Support Barrel	
12	36020	Nut	


Lid, Lid Lock and Cabinet Top Models GWNSX1PP302EW09, HWNSX1SP302UW09 and SWNSX1SP302EW09

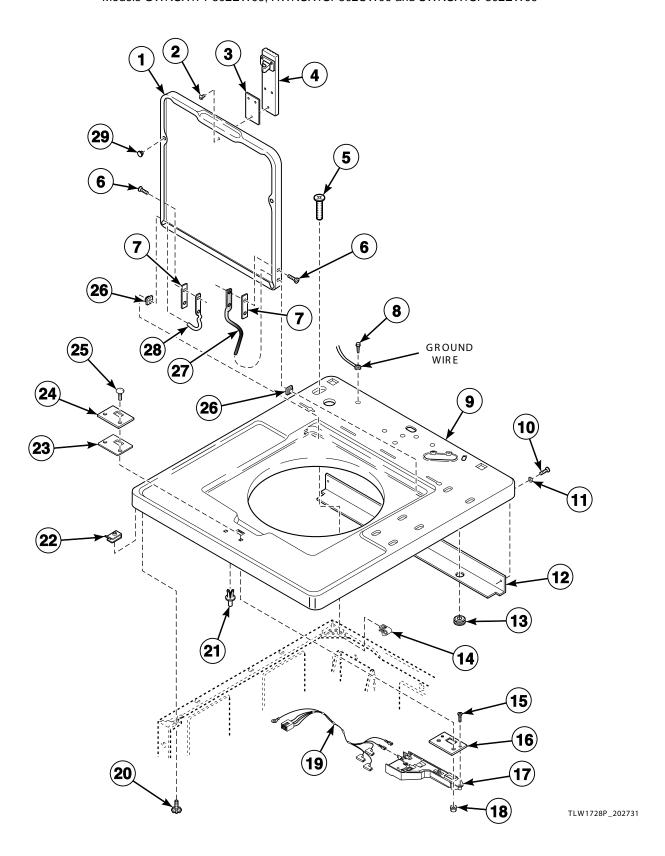

Lid, Lid Lock and Cabinet Top

REF	PART NO.	DESCRIPTION	COMMENTS
	837P3	Lid Lock Kit	Includes items 4, 15 and 17
1	200892WP	Lid	
2	201415	Screw	
3	201414	Door Lock Spacer	
4	201307P	Lid Lock Catch Assembly	Includes item 3
5	D503673	Screw	Optional; For added security
6	34337	Screw	
7	34338	Hinge Gasket	
8	52909	Screw	
9	39184WP	Top Assembly	
10	431287	Screw	
11	39249	Washer	
12	39744	Top Shield	
13	80262	Grommet	
14	27222	Nut	Optional; For added security
15	202623	Screw	
16	29676	Switch Mounting Plate	
17	202434	Lid Lock	
18	22001	Nut	
19	31973	Lid Lock Wire Harness Assembly	
20	23008	Screw	
21	56534	Support Barrel	
22	36020	Nut	
23	30378	Lid Lock Gasket	
24	37828P	Cover Plate	
25	32184	Bolt	
26	33446	Bushing	
27	36437	Lid Hinge	Right
28	36438	Lid Hinge Left	
29	21685	Bumper	


Lid Switch

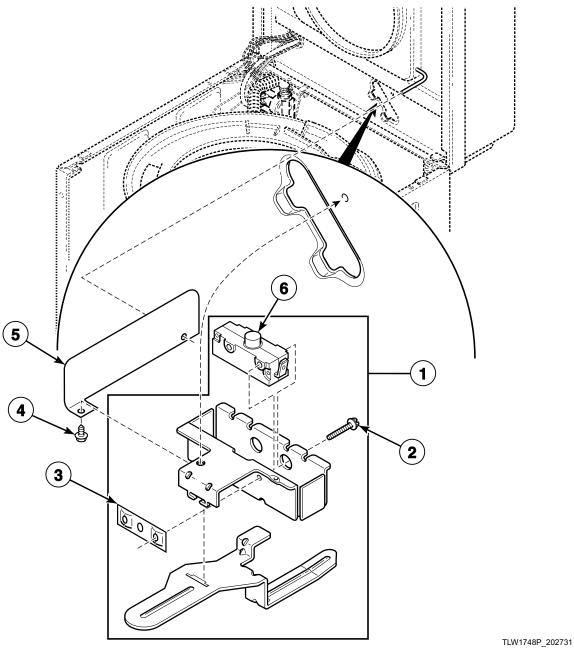

Lid Switch

REF	PART NO.	DESCRIPTION	COMMENTS
1	39256	Switch Assembly	Models GWNSX1PP302EW09, HWNSX1SP302UW09, SWNSX1SP302BW01, SWNSX1SP302EW09 and SWNSX1SP302UW01
	37631	Lid Switch Assembly	All other models
2	M402574	Screw	
3	M400981	Nut	
4	23962	Screw	
5	202697	Lid Switch Shield	Models BWNBX2PP302AW01, BWNMN2PP302AW01, HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP542DW01, HWNLX1SP122DW01, PWNBX2PP302AG02, SWNBX1SP122DW01, SWNBX1SP542DW01, SWNBX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP122DW01, SWNLX1SP542DW01, SWNLX2SP302AW01, SWNSX1PP302AW01, SWNSX1PP302AW01
6	37830	Switch	Models GWNSX1PP302EW09, HWNSX1SP302UW09, SWNSX1SP302BW01, SWNSX1SP302EW09 and SWNSX1SP302UW01
	33445	Switch	All other models


Mixing Valve-to-Tub Cover Hose and Mixing Valve

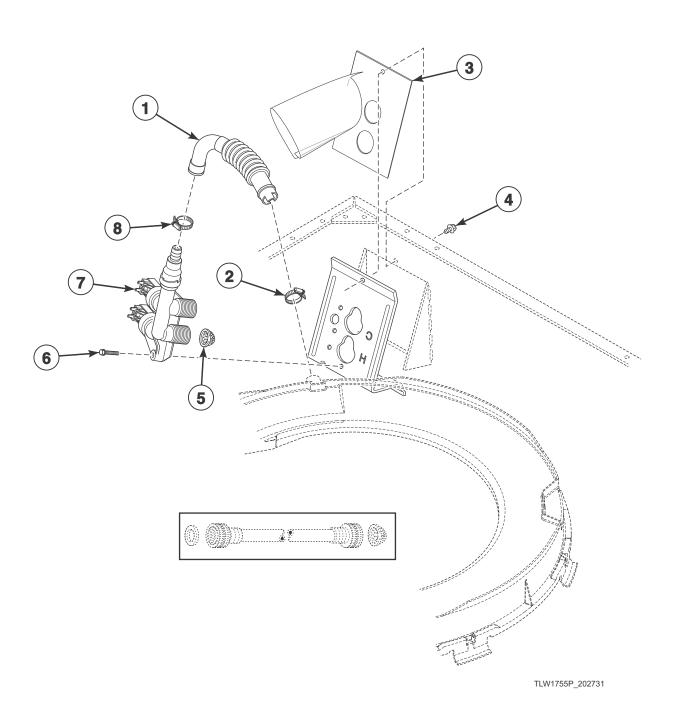

Mixing Valve-to-Tub Cover Hose and Mixing Valve

REF	PART NO.	DESCRIPTION	COMMENTS
1	202472	Mixing Valve-to-Tub Cover Hose	
2	800803	Hose Clamp	
3	202899	Mixing Valve Shield	Models BWNBX2PP302AW01, BWNMN2PP302AW01, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 starting Serial No. 1404009801
4	33562	Screw	
5	24122	Mixing Valve Screen	
6	39397	Screw	
7	202396P	Mixing Valve	Models BWNBX2PP302AW01, BWNMN2PP302AW01, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 Through Serial Nos. beginning 1412; Models GWNMN1PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNSX1PP302EW09, GWNSX1PP302AW01, GWNSX1PP302EW09, GWNSX2PP302AW01, GWNSX2PP302NW01, HWNBX1SP542DW01, HWNLX1SP542DW01, HWNSX1SP302UW09, NWNBX2SP302NW22, NWNMN1SP542NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNBX1SP542DW01, SWNBX2SP302NW22, SWNLX1SP542DW01, SWNBX2SP302NW22, SWNLX1SP542DW01, SWNBX1SP542DW01, SWNLX1SP542DW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01 and TWNBX2SP302NW22
	203145P	Mixing Valve	Models BWNBX2PP302AW01, BWNMN2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 Starting Serial Nos. beginning 1412
	202395P	Mixing Valve	All other models
8	36801	Hose Clamp	


Fill Hose

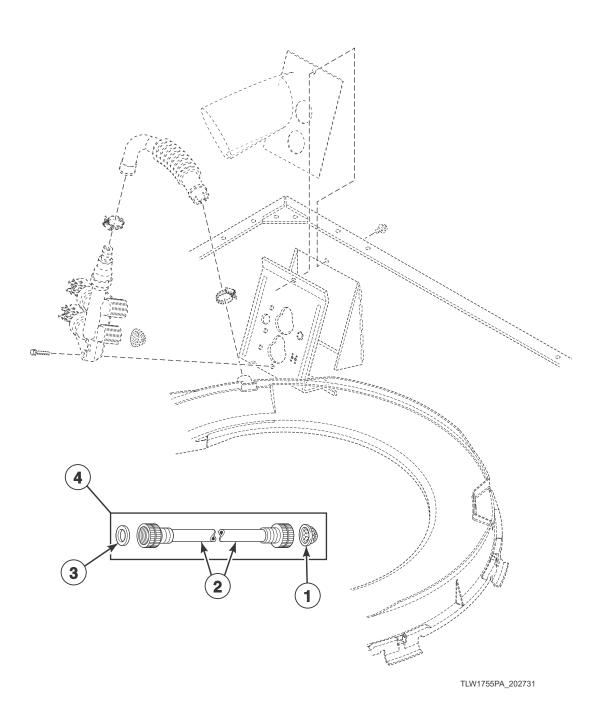

Fill Hose

REF	PART NO.	DESCRIPTION	COMMENTS
1	803615	Washer	Filter screen
	802254	Washer	Flow restrictor; Water pressure reducer; Available for water pressure up to but not exceeding 120 psi
2	202799	Fill Hose	Models HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP122DW01, HWNLX1SP542DW01, SWNBX1SP122DW01, SWNBX1SP542DW01, SWNLX1SP122DW01 and SWNLX1SP542DW01
	202800	Fill Hose	Models BWNBX2PP302AW01, BWNMN2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01
	20617	Fill Hose	8 feet; 2 U.S. standard thread hose couplings; All other models
	20618	Fill Hose	10 feet; 2 U.S. standard thread hose couplings; All other models
	37380	Fill Hose	8 feet; 1 U.S. standard thread and 1 metric thread hose coupling; All other models
	37381	Fill Hose	10 feet; 1 U.S. standard thread and 1 metric thread hose coupling; All other models
3	20290	Washer	
4	F200116	Water Hose	5 feet; Includes items 1-3; 2 U.S. standard thread hose couplings; All models except BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN2PP302NW01, GWNSX2PP302NW01, HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP542DW01, PWNBX2PP302AG02, SWNBX1SP122DW01, SWNBX1SP122DW01, SWNBX2SP302AW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01
	38349P	Fill Hose Kit	5 feet; Includes 2 of item 3; 1 U.S. standard thread and 1 metric thread hose coupling; All models except BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN2PP302NW01, GWNSX2PP302NW01, HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP122DW01, HWNLX1SP122DW01, PWNBX2PP302AG02, SWNBX1SP122DW01, SWNBX1SP542DW01, SWNBX1SP542DW01, SWNLX1SP122DW01, SWNLX1SP122DW01, SWNLX1SP302AW01, SWNLX1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01
	203676	Hose and Washers Kit	Includes 2 of item 3; Models HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP122DW01, HWNLX1SP542DW01, SWNBX1SP122DW01, SWNBX1SP542DW01, SWNLX1SP122DW01 and SWNLX1SP542DW01
	203675	Hose and Washers Kit	Includes 2 of item 3; Models BWNBX2PP302AW01, BWNMN2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01

Motor, Belt, Pump and Idler Assembly (Drawing 1 of 3) Models GWNSX1PP302EW09, HWNSX1SP302UW09, SWNSX1SP302EW09 and SWNSX1SP302UW01

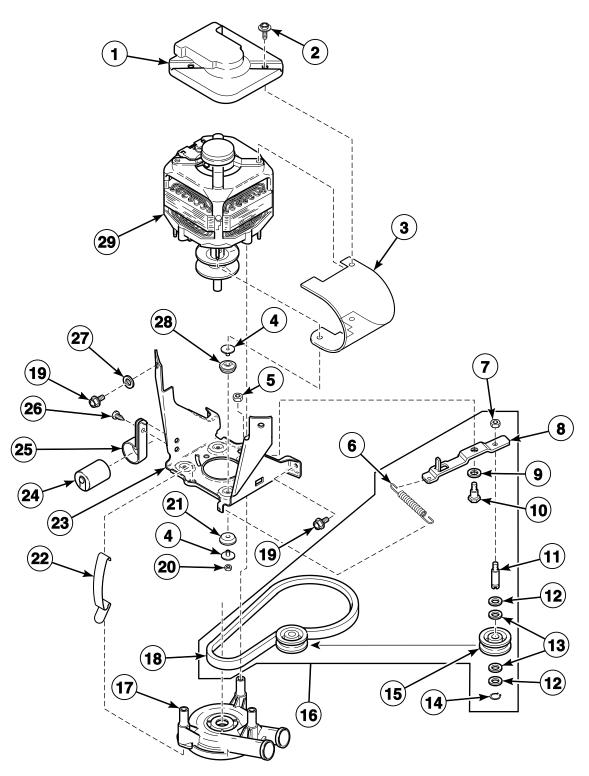


TLW1730P_202731

Motor, Belt, Pump and Idler Assembly (Drawing 1 of 3)

1 34754 Motor Shield 2 36639 Screw 3 36965 Motor Side Shield 4 38325 Isolator Post 5 52566 Nut 6 201189 Idler Lever Spring 7 28803 Nut 8 38011 Idler Lever 9 81392 Washer 10 27229 Screw 11 20186 Idler Shaft 12 D504082 Washer 13 52549 Washer 13 52549 Washer 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062	REF	PART NO.	DESCRIPTION	COMMENTS
3 36965 Motor Side Shield 4 38325 Isolator Post 5 52566 Nut 6 201189 Idler Lever Spring 202032 Idler Lever Spring Use on units experiencing low RPM 7 28803 Nut 8 38011 Idler Lever 9 81392 Washer 10 27229 Screw 11 201866 Idler Shaft 12 D504082 Washer 13 52549 Washer 13 52549 Washer 14 23748 Retaining Ring 15 38225P Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24	1	34754	Motor Shield	
4 38325 Isolator Post 5 52566 Nut 6 201189 Idler Lever Spring 202032 Idler Lever Spring Use on units experiencing low RPM 7 28803 Nut 8 38011 Idler Lever 9 81392 Washer 10 27229 Screw 11 210186 Idler Shaft 12 D504082 Washer 13 52549 Washer 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket	2	36639	Screw	
5 52566 Nut 6 201189 Idler Lever Spring Use on units experiencing low RPM 7 28803 Nut 8 38011 Idler Lever 9 81392 Washer 10 27229 Screw 11 210186 Idler Shaft 12 D504082 Washer 13 52549 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25	3	36965	Motor Side Shield	
6 201189 Idler Lever Spring Use on units experiencing low RPM 7 28803 Nut 8 38011 Idler Lever 9 81392 Washer 10 27229 Screw 11 210186 Idler Shaft 12 D504082 Washer 13 52549 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp <th< th=""><th>4</th><th>38325</th><th>Isolator Post</th><th></th></th<>	4	38325	Isolator Post	
202032 Idler Lever Spring Use on units experiencing low RPM 7 28803 Nut 8 38011 Idler Lever 9 81392 Washer 10 27229 Screw	5	52566	Nut	
7 28803 Nut 8 38011 Idler Lever 9 81392 Washer 10 27229 Screw 11 210186 Idler Shaft 12 D504082 Washer 13 52549 Washer 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer	6	201189	Idler Lever Spring	
8 38011 Idler Lever 9 81392 Washer 10 27229 Screw 11 210186 Idler Shaft 12 D504082 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount		202032	Idler Lever Spring	Use on units experiencing low RPM
9 81392 Washer 10 27229 Screw 11 210186 Idler Shaft 12 D504082 Washer 13 52549 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	7	28803	Nut	
10 27229 Screw 11 210186 Idler Shaft 12 D504082 Washer 13 52549 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	8	38011	ldler Lever	
11 210186 Idler Shaft 12 D504082 Washer 13 52549 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	9	81392	Washer	
12 D504082 Washer Nylatron 13 52549 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	10	27229	Screw	
13 52549 Washer Nylatron 14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	11	210186	Idler Shaft	
14 23748 Retaining Ring 15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	12	D504082	Washer	
15 38225P Idler Pulley 16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	13	52549	Washer	Nylatron
16 202972 Idler Lever and Belt Kit 17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	14	23748	Retaining Ring	
17 201566P Pump 201442P Pump Assembly Heavy duty 18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	15	38225P	Idler Pulley	
201442P	16	202972	Idler Lever and Belt Kit	
18 200923 Agitate and Spin Belt 19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	17	201566P	Pump	
19 35369 Screw 20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount			•	Heavy duty
20 685846 Nut 21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	18	200923	Agitate and Spin Belt	
21 204062 Isolator Assembly 22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	19		Screw	
22 210202 Spring Clip 23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount				
23 200941 Motor Mount Bracket 24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	21			
24 39259P Capacitor and Clamp Kit 25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	22			
25 37535 Capacitor Clamp 26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	23			
26 52909 Screw 27 37772 Washer 28 38395 Motor Mount	24			
27 37772 Washer 28 38395 Motor Mount	25			
28 38395 Motor Mount				
	27			
29 835P3 Motor Kit 1 speed; 240 Volt/50 Hertz	28	38395		
	29	835P3	Motor Kit	1 speed; 240 Volt/50 Hertz

Motor, Belt, Pump and Idler Assembly (Drawing 2 of 3)

Models BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNLY2SP302NW22, SWNMN1SP302AW01, SWNMN1SP302SW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX1SP302SW01 and SWNSX1SP302SW01

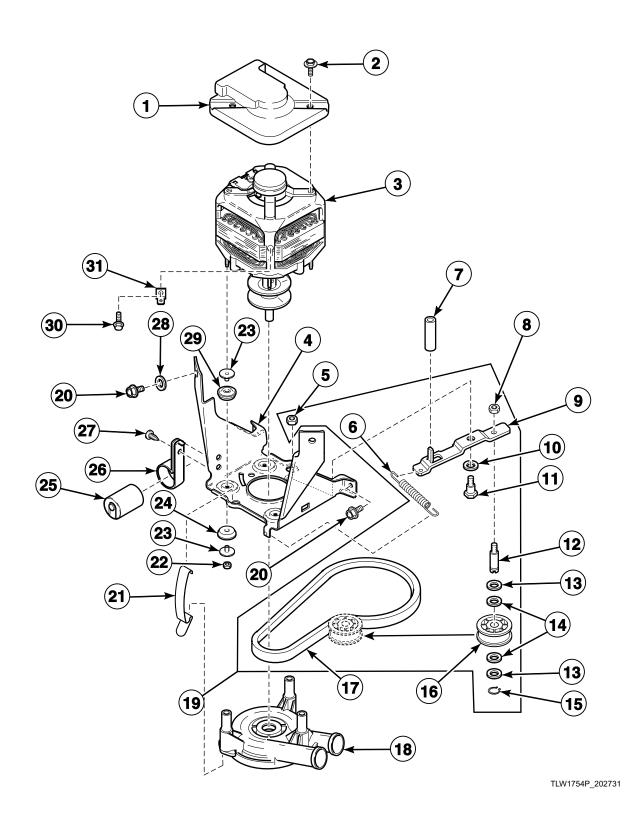


Motor, Belt, Pump and Idler Assembly (Drawing 2 of 3)

1 34754	REF	PART NO.	DESCRIPTION	COMMENTS
2 36639 Screw	1	34754	Motor Shield	Through Serial No. 1404009800
201433P		35886	Motor Shield	Starting Serial No. 1404009801
BWNBXZPP302AW01, BWNMNZPP302AW01, GWNSXPP302AW01, GWNSXPP302AW01, GWNSXPP302AW01, GWNSXPP302AW01 GWNSXPP302AW01 SWNLX2SP302AW01 SWNLX2SP302AW01 and SWNLY2SP302AW01. SWNLX2SP302AW01 and SWNLY2SP302AW01 and SWNLY2SP302AW01, SWNLY2SP302SW01 8	2	36639	Screw	
4 200941 Motor Mount Bracket 5 52566 Nut 6 201189 Idler Lever Spring 202032 Idler Lever Spring Use on units experiencing low RPM 7 202333 Tube Models BWNBX2P9302AW01, BWNMX1PP302AW01, SWNBX2P9302AW01, SWNBX2P9302AW01, SWNBX2P9302AW01, SWNSX1P920AW01, SWNSX1P920AW01, SWNSX1P920AW01, SWNSX1P9302SW01 8 28803 Nut 9 38011 Idler Lever 10 81392 Washer Washer 11 27229 Screw 12 210186 Idler Shaft 13 D504082 Washer 14 52549 Washer 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip	3	201433P	Motor Kit	BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN2PP302AW01, GWNSX2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01,
5 52566 Nut 6 201189 Idler Lever Spring Use on units experiencing low RPM 7 20233 Tube Models BWNBX2PP302AW01, BWNMN2PP302AW01, SWNBX2PP302AW01, SWNBX2PP302AW01, SWNBX1PP302AW01, SWNBX1PP302AW01, SWNSX1SP302SW01, SWNSX1PP302AW01, SWNSX1SP302SW01, SWNSX1SP302SW01 8 28803 Nut SWNSX1SP302AW01, SWNSX1SP302SQ01 and SWNSX1SP302SW01 9 38011 Idler Lever 10 81392 Washer 11 27229 Screw 12 210186 Idler Shaft 13 D504082 Washer 14 52549 Washer 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut		835P3	Motor Kit	240 Volt/50 Hertz; 1 speed; All other models
Counting	4	200941	Motor Mount Bracket	
202032 Idler Lever Spring	5	52566	Nut	
7 202333 Tube Models BWNBX2PP302AW01, BWNMN2PP302AW01, PWNBX2PP302AW02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNLX2SP302AW01, SWNLX2SP302AW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01 8 28803 Nut SWNSX1SP302SW01 9 38011 Idler Lever 10 81392 Washer 11 27229 Screw 12 210186 Idler Shaft 13 D504082 Washer Nylatron 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor Clamp <th< th=""><th>6</th><th>201189</th><th>Idler Lever Spring</th><th></th></th<>	6	201189	Idler Lever Spring	
PWNBX2PP302AG02, SWNBX2SP302AW01, SWNMN1SP302AW01, SWNMN1SP302AW01, SWNMN1SP302AW01, SWNMN1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302SQ01 and SWNSX1SP302SQ01 and SWNSX1SP302SQ01 and SWNSX1SP302SW01		202032	Idler Lever Spring	Use on units experiencing low RPM
9 38011 Idler Lever	7	202333	Tube	PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNMN1SP302SW01, SWNSX1PP302AW01, SWNSX1SP302AW01, SWNSX1SP302SQ01 and
10 81392 Washer 11 27229 Screw 12 210186 Idler Shaft 13 D504082 Washer 14 52549 Washer Nylatron 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 </th <th>8</th> <th>28803</th> <th>Nut</th> <th></th>	8	28803	Nut	
11 27229 Screw 12 210186 Idler Shaft 13 D504082 Washer 14 52549 Washer Nylatron 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2P302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Clamp Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530	9	38011	Idler Lever	
12 210186 Idler Shaft 13 D504082 Washer 14 52549 Washer Nylatron 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302AW01, SWNLX2SP302AW01 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount	10	81392	Washer	
13 D504082 Washer Nylatron 14 52549 Washer Nylatron 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Clamp Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 2	11	27229	Screw	
14 52549 Washer Nylatron 15 23748 Retaining Ring 16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW022 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	12	210186	Idler Shaft	
15	13	D504082	Washer	
16 38225P Idler Pulley 17 200923 Agitate and Spin Belt 18 201566P Pump 201442P Pump Assembly Heavy duty 19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	14	52549	Washer	Nylatron
17 200923 Agitate and Spin Belt 18	15	23748	Retaining Ring	
18	16	38225P	<u>*</u>	
201442P	17	200923	Agitate and Spin Belt	
19 202972 Idler Lever and Belt Kit 20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	18	201566P	Pump	
20 35369 Screw 21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw		201442P	· · · · · · · · · · · · · · · · · · ·	Heavy duty
21 210202 Spring Clip 22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	19	202972	Idler Lever and Belt Kit	
22 685846 Nut 23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	20	35369	Screw	
23 38325 Isolator Post 24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	21		1 0 1	
24 204062 Isolator Assembly 25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	22			
25 39259P Capacitor and Clamp Kit Through Serial No. 1404009800; All models except BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140 Capacitor Starting Serial No. 1404009801 26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	23			
BWNMN2PP302AW01, SWNLX2SP302AW01 and SWNLY2SP302NW22 203140	24		<u> </u>	
26 37535 Capacitor Clamp 27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	25	39259P	Capacitor and Clamp Kit	BWNMN2PP302AW01, SWNLX2SP302AW01 and
27 52909 Screw 28 37772 Washer 29 38395 Motor Mount 30 20530 Screw			•	Starting Serial No. 1404009801
28 37772 Washer 29 38395 Motor Mount 30 20530 Screw	26		Capacitor Clamp	
29 38395 Motor Mount 30 20530 Screw	27			
30 20530 Screw	28			
	29		Motor Mount	
31 00177 Male Tab Terminal				
	31	00177	Male Tab Terminal	

Motor, Belt, Pump and Idler Assembly (Drawing 3 of 3)

All Models Except GWNMN1PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX1PP302EW09, GWNSX2PP302AW01, HWNSX1SP302UW09, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNLX2SP302AW01, SWNLX2SP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX1SP302EW09, SWNSX1SP302SQ01, SWNSX1SP302SW01 and SWNSX1SP302UW01

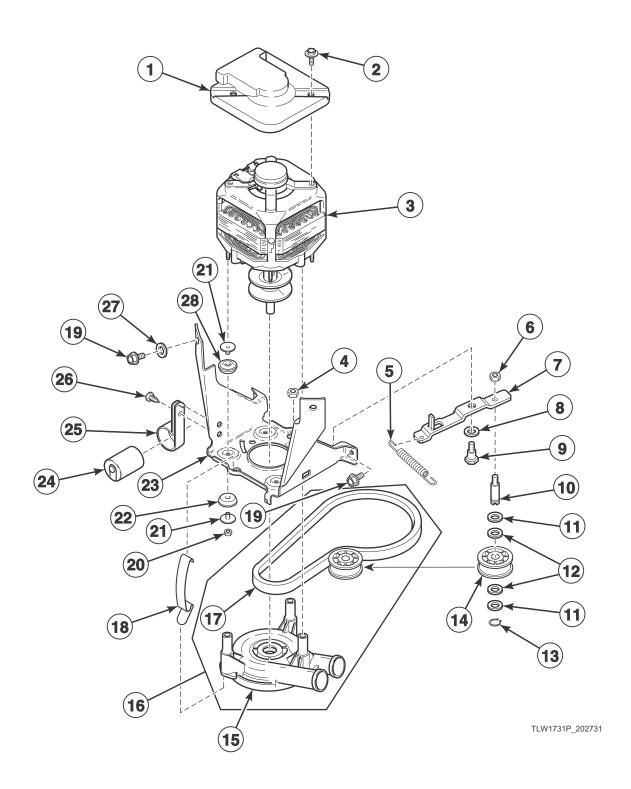


Motor, Belt, Pump and Idler Assembly (Drawing 3 of 3)

REF	PART NO.	DESCRIPTION	COMMENTS
1	34754	Motor Shield	
2	36639	Screw	
3	38035P	Motor Kit	115 Volt/60 Hertz; 1 speed; Models HWNSX1PP112TQ01, HWNSX1PP112TW01, HWNSX1SP112CW01, SWNSX1PP112TQ01, SWNSX1PP112TW01, SWNSX1SP112TQ01 and SWNSX1SP112TW01
	35030P	Motor Assembly	240 Volt/60 Hertz; 1 speed; Models HWNBX1SP542DW01, HWNLX1SP542DW01, NWNMN1SP542NW22, SWNBX1SP542DW01, SWNLX1SP542NW23 and SWNSX1SP542NW22
	202457	Motor Assembly	Models HWNBX1SP122DW01, HWNLX1SP122DW01, SWNBX1SP122DW01 and SWNLX1SP122DW01
	835P3	Motor Kit	240 Volt/50 Hertz; 1 speed; Models SWNMN1SP302NW22 and SWNSX1SP302NW22
	201433P	Motor Kit	240 Volt/50 Hertz; 2 speed; Models GWNMN2PP302NW01, GWNSX2PP302NW01, NWNBX2SP302NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNBX2SP302NW22 and TWNBX2SP302NW22
	38034P	Motor Kit	2 speed; All other models
4	52566	Nut	
5	201189	Idler Lever Spring	
	202032	Idler Lever Spring	Use on units experiencing low RPM
6	28803	Nut	
7	38011	Idler Lever	
8	81392	Washer	
9 10	27229 210186	Screw Idler Shaft	
11	D504082	Washer	
12	52549	Washer	Nylatron
13	23748	Retaining Ring	Nylation
14	38225P	Idler Pulley	
15	201566P	Pump	_
	201442P	Pump Assembly	Heavy duty
16	RB150003	Belt and Pump Kit	Includes items 15 and 17 (38174 Belt)
17	200923	Agitate and Spin Belt	Models GWNMN2PP302NW01, GWNSX2PP302NW01, NWNBX2SP302NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNBX2SP302NW22, SWNMN1SP302NW22, SWNSX1SP302NW22 and TWNBX2SP302NW22
	38174	Agitate and Spin Belt	All other models
18	210202	Spring Clip	
19	35369	Screw	
20	35423	Nut	
21	38325	Isolator Post	
22	204062 200941	Isolator Assembly Motor Mount Bracket	
24	39259P	Capacitor and Clamp	Models SWNMN1SP302NW22 and SWNSX1SP302NW22
	37377	Kit Capacitor	All models except GWNMN2PP302NW01, GWNSX2PP302NW01, HWNBX1SP542DW01, HWNLX1SP542DW01, NWNBX2SP302NW22, NWNMN1SP542NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNBX1SP542DW01, SWNBX2SP302NQ22, SWNBX2SP302NW22, SWNLX1SP542DW01, SWNMN1SP302NW22, SWNSX1SP302NW22, SWNSX1SP542NW22 and TWNBX2SP302NW22
25	37535	Capacitor Clamp	All models except HWNBX1SP542DW01, HWNLX1SP542DW01, SWNBX1SP542DW01, SWNLX1SP542DW01 and TWNBX2SP302NW22
26	52909	Screw	
27	37772	Washer	
28	38395	Motor Mount	

Idler Lever Kits

All Models Except GWNMN1PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX1PP302EW09, GWNSX2PP302AW01, HWNSX1SP302UW09, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNLX2SP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX

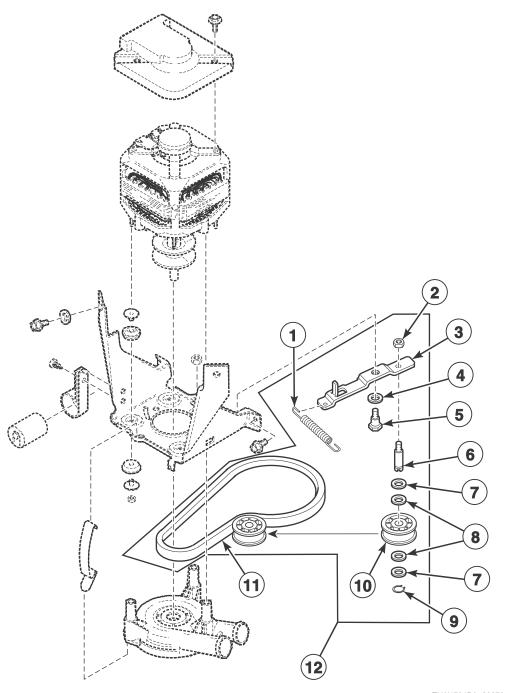


TLW1731PA_202731

Idler Lever Kits

REF	PART NO.	DESCRIPTION	COMMENTS
1	202032	Idler Lever Spring	
2	28803	Nut	
3	38011	Idler Lever	
4	81392	Washer	
5	27229	Screw	
6	210186	Idler Shaft	
7	D504082	Washer	
8	52549	Washer	Nylatron
9	23748	Retaining Ring	
10	38225P	Idler Pulley	
11	200923	Agitate and Spin Belt	Models GWNMN2PP302NW01, GWNSX2PP302NW01, NWNBX2SP302NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNBX2SP302NW22, SWNBX2SP302NW22, SWNSX1SP302NW22 and TWNBX2SP302NW22
	38174	Agitate and Spin Belt	All other models
12	202972	Idler Lever and Belt Kit	Models GWNMN2PP302NW01, GWNSX2PP302NW01, NWNBX2SP302NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNBX2SP302NW22, SWNBX2SP302NW22, SWNSX1SP302NW22 and TWNBX2SP302NW22; Includes items 1-11
	959P3	Idler Lever Kit	All other models; Includes items 1-11

Agitator, Drive Bell, Hub and Lip Seal Kit and Washtub

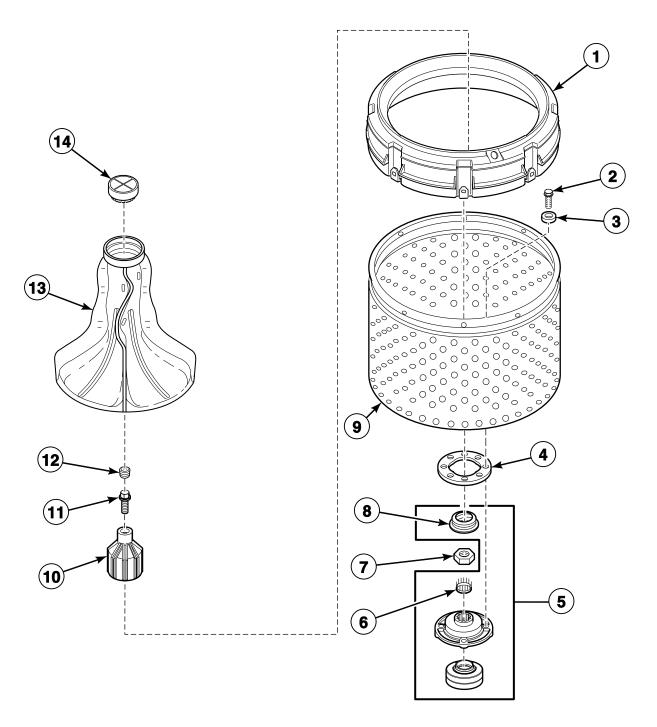


TLW1483P_202731

Agitator, Drive Bell, Hub and Lip Seal Kit and Washtub

REF	PART NO.	DESCRIPTION	COMMENTS
1	39837	Balance Ring Assembly	
2	27202	Screw	
3	28094	Washer	Rubber; Use with porcelain washtub
4	39122	Washtub Gasket	
5	766P3A	Hub and Lip Seal Kit	DO NOT use any sealant other than 200996P Sealant Includes item 10 and installation tool
	200996P	Sealant	Use with hub and lip seal kit
6	29728	Spline Insert	
7	29220	Nut	
8	36425	Bell and Transmission Tube Seal	
-	36765P	Grease	Use with bell and transmission tube seal
9	39250P	Tub Kit	Blue porcelain; Models BWNBC2PP112TW01, BWNBX2PP112TW01, BWNBX2PP302AW01, BWNBY2PP112TW01, BWNBN2PP112CW01, BWNMN2PP302AW01, BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNSX1PP302EW09, GWNSX1PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, HWNBC2PP112TW01, HWNBC2PP112TW01, HWNBC2PP112TW01, HWNSX1PP112TW01, HWNSX1PP112TW01, HWNSX1PP112TW01, HWNSX1PP112TW01, HWNSX2PP112TW01, FWNBC2PP112TW01, SWNBC2PP112TG02, PWNBX2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW02, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNLC2PP112TW01, SWNLC2PP112TW01, SWNLC2PP112TW01, SWNLC2PP112TW01, SWNLC2PP112TW01, SWNLC2PP112TW01, SWNLC2PP112TW01, SWNSX1PP112TW01, SWNSX2PP112TW01, SWNSX2PP112TW01
	39252P	Tub Assembly	Models HWNLE2AP112CW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLX2AP112TW02, SWNLY2AP112TW11
	39387P	Tub Assembly	Models HWNLE2HP112CW01, HWNLX2HP112CW01 HWNLY2HP112CW01, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW02, SWNLY2HP112TW01 and SWNWY2HP112TW11
	719P3	Washtub Kit	Stainless steel; All other models
10	39508P	Drive Bell and Seal Kit	Includes items 8, 11 and 12
11	39432	Screw	
12	36511	Bell Plug	
13	36507	Flex Vane Agitator	Models SWNMN1SP302SW01, SWNSX1SP302SQ01 and SWNSX1SP302SW01
	33174	Agitator	All other models
	36515	Agitator Cap	


Outer Tub, Cover, Bearing and Seal Housing and Counterweight

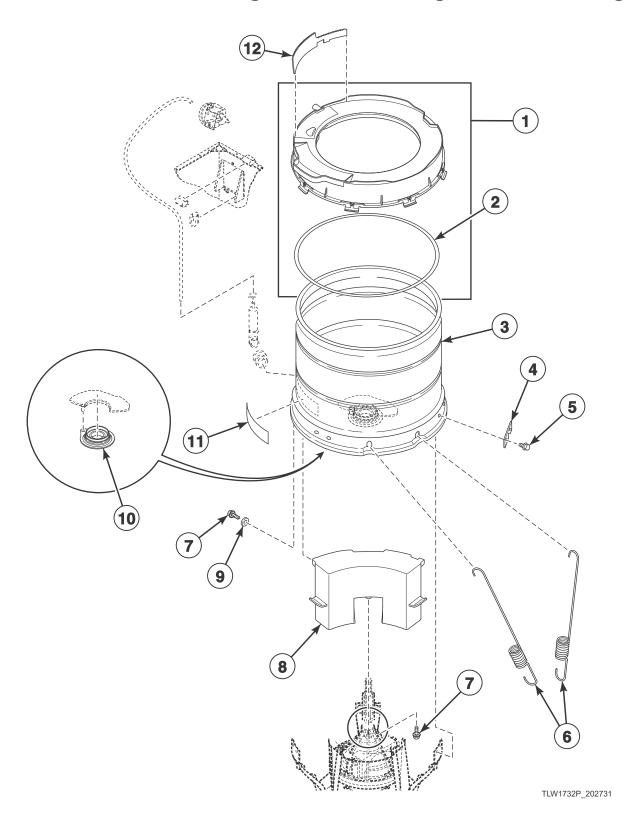

Outer Tub, Cover, Bearing and Seal Housing and Counterweight

REF	PART NO.	DESCRIPTION	COMMENTS
1	203154	Tub Cover Assembly	Includes check valve; Models BWNBX2PP302AW01, BWNMN2PP302AW01, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01; Through Serial Nos. beginning 1412
	202461	Tub Cover Assembly	Models BWNBX2PP302AW01, BWNMN2PP302AW01, SWNBX2SP302AW01, SWNLX2SP302AW01,SWNMN1SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01 starting Serial Nos. beginning 1412; All other models
2	38359	Tub Cover Gasket	
3	203604P	Outer Tub Assembly	Models HWNLE2HP112CW01, HWNLX2HP112CW01, HWNLY2HP112CW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLX2AP112TW02, SWNLX2AP112TW01, SWNLX2HP112TW01, SWNLY2AP112TW11 and SWNWY2HP112TW11
	203603P	Outer Tub Assembly	All other models
4	27926	Leg Plate	
5	35369	Screw	
6	201521	Leg Spring	Marked with green paint. Use to replace the two rear springs closest to counterweight; Models BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN2PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, NWNBX2SP302NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNBX2SP302NW22, SWNBX2SP302AW01, SWNLY2SP302NW22 and TWNBX2SP302NW22
	37576	Leg Spring	Models HWNLE2HP112CW01, HWNLX2HP112CW01, HWNLY2HP112CW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLX2AP112TW02, SWNLX2AP112TW01, SWNLX2HP112TW01, SWNLY2AP112TW11 and SWNWY2HP112TW11
	37575	Leg Spring	All other models
7	39566	Screw	
8	38769	Counterweight Assembly	
9	39249	Washer	
10	766P3A	Hub and Lip Seal Kit	
	200996P	Sealant	Use with hub and lip seal kit
11	D500314	Warning Label	Models BWNMN2PP112CW01, BWNSX2PP112CW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLE2HP112CW01, HWNLX2HP112CW01, HWNLX2SP112CW01, HWNLX2SP112CW01, HWNLX2SP112CW01, HWNLX2SP112CW01, HWNMN2SP112CW01, HWNSX1SP112CW01, HWNSX2SP112CW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW01, SWNLX2HP112TW01, SWNMN2SP112CW01, SWNSX2SP112CW02 and UWNMN2SP112CW01
	F8615701	Pinch Warning Label	Models GWNSX1PP302EW09, HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP122DW01, HWNLX1SP542DW01, HWNSX1SP302UW09, SWNBX1SP122DW01, SWNBX1SP542DW01, SWNLX1SP122DW01, SWNLX1SP302EW09 and SWNSX1SP302UW01
	D500049	Warning Label	All other models


Pressure Hose and Bulb

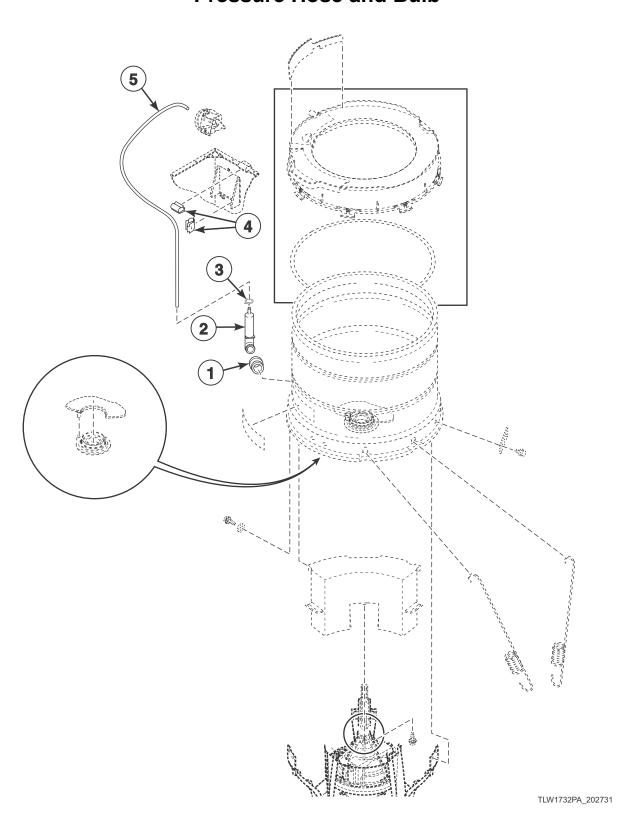

Pressure Hose and Bulb

REF	PART NO.	DESCRIPTION	COMMENTS
1	29175	Grommet	
2	30907	Pressure Bulb	
3	39282	Hose Clamp	
4	36985	Hose Clip	
5	202699	Tubing	Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLX2HP112CW01, HWNLY2HP112CW01, SWNLC2AP112TW02, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLX2AP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW02, SWNLY2AP112TW01, SWNLY2AP112TW01, SWNLY2AP112TW01, SWNWY2AP112TW11
	203296	Tubing	Models HWNLE2SP112CW01, HWNLX1SP122DW01, HWNLX1SP542DW01, HWNLX2SP112CW01, HWNLY2SP112CW01, HWNLY2SP112CW01, SWNLC2PP112TW01, SWNLC2PP112TW02, SWNLC2SP112TW02, SWNLC2SP112TW02, SWNLX1SP122DW01, SWNLX1SP542DW01, SWNLX1SP542NW23, SWNLX2PP112TW02, SWNLX2SP112TW01, SWNLX2SP112TW01, SWNLX2SP302AW01, SWNLY2PP112TW01, SWNLY2SP112TW01 and SWNLY2SP302NW22
	202700	Tubing	All other models


Transmission Assembly

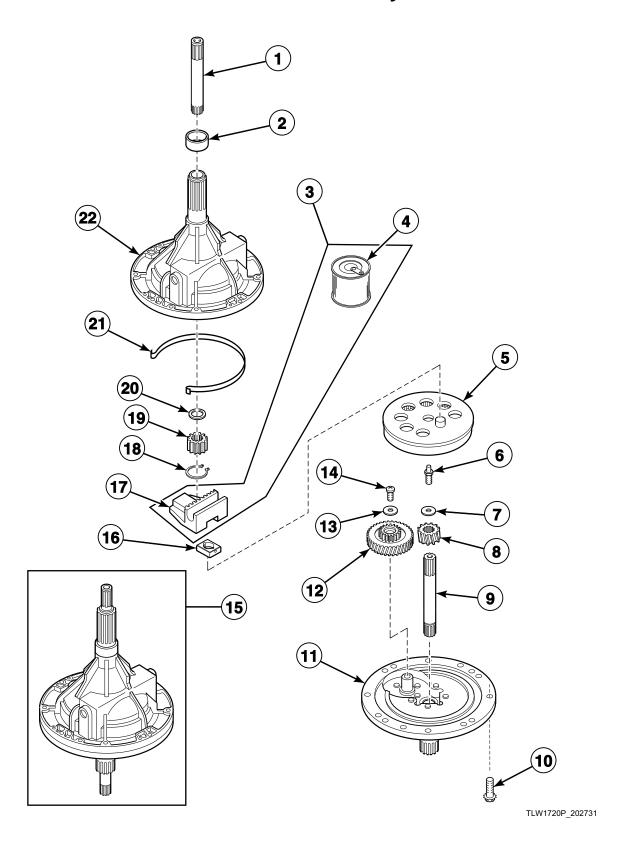

Transmission Assembly

REF	PART NO.	DESCRIPTION	COMMENTS
	27604P	Anti-Seize Compound	Apply to the smooth area of both the upper and lower transmission shafts
	37577P	Transmission Sealant	Use between transmission case and cover
1	36570P	Output Shaft	
2	201212	Hub Spacer	
3	RB150004	Transmission Rebuild Kit	Includes 37577P Transmission Sealant
4	27243P	Transmission Oil	1 fill
5	26577	Gear and Stud Assembly	
6	201773	Screw	
7	26509	Washer	
8	37405	Drive Pinion	
9	38268P	Input Shaft	
10	32814	Screw	
11	37471	Transmission Cover Assembly	
12	37404P	Reduction Gear	
13	29260	Washer	
14	29273	Screw	
15	38165P	Transmission Assembly	
16	26493	Slide	
17	201664	Rack	
18	27197	Retaining Ring	
19	27003	Agitator Pinion	
20	35092	Washer	
21	38864	Gear Sleeve	
22	33223P	Transmission Case Assembly	

Drain Hoses and Siphon Break Kit

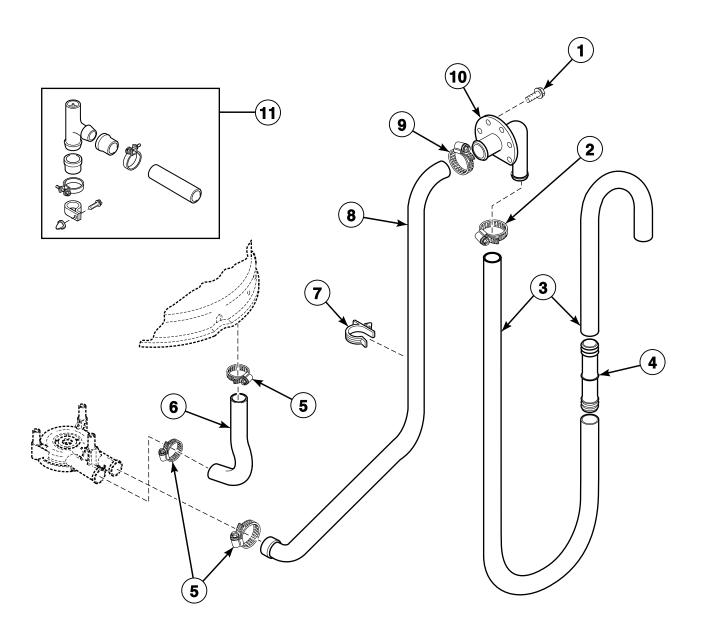


W354P_202731

Drain Hoses and Siphon Break Kit

REF	PART NO.	DESCRIPTION	COMMENTS
	451P3	Drain Extension Kit	
1	52909	Screw	
2	20211	Hose Clamp	
3	28293	Drain Hose	
4	25863	Hose Coupler	If drain hose must be shortened, cut hose between molded end and molded elbow; Use (1) 25863 Hose Coupler to splice hose
5	F200204	Hose Clamp	
6	38351	Tub-to-Pump Hose	
7	39177	Hose Retainer Clip	
8	38273	Pump-to-Drain Elbow Hose	
9	20391	Hose Clamp	
10	35766	Drain Hose Elbow	Models BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX1PP302EW09, GWNSX2PP302AW01, GWNSX2PP302NW01, HWNSX1SP302UW09, NWNBX2SP302NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNBX2SP302AW01, SWNLY2SP302AW01, SWNLY2SP302NW22, SWNMN1SP302AW01, SWNMN1SP302NW22, SWNMN1SP302SW01, SWNSX1PP302AW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX1SP302BW01, SWNSX1SP302BW01, SWNSX1SP302BW01, SWNSX1SP302BW01, SWNSX1SP302SQ01, SWNSX1SP302SW01, SWNSX1SP302SW01 and TWNBX2SP302NW22
	36990	Drain Hose Elbow	All other models
11	562P3	Siphon Break Kit	Siphon break kit must be installed in drain hose if drain receptacle is lower than cabinet top of washer


Weldment and Bearing Assembly, Brake and Pulley

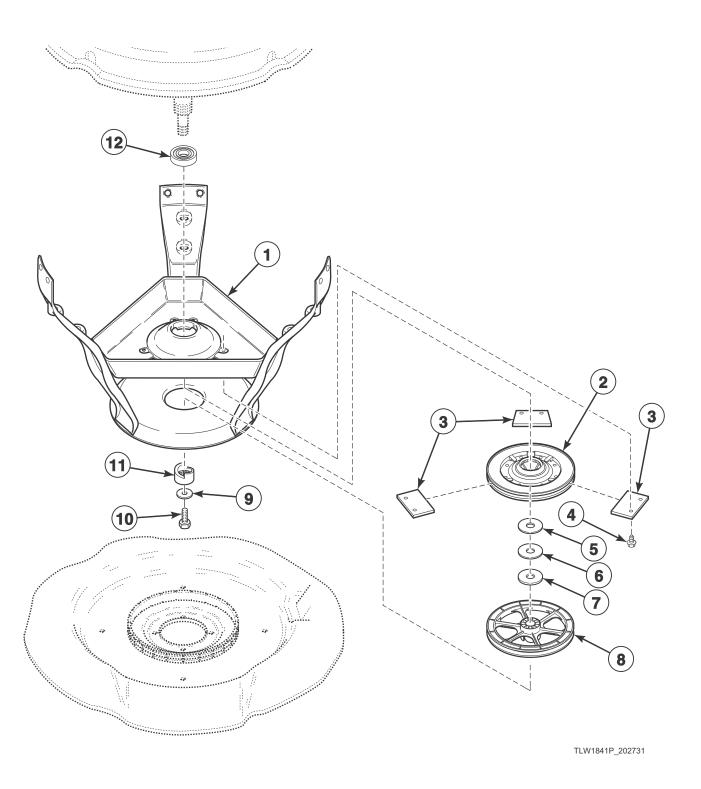

Weldment and Bearing Assembly, Brake and Pulley

REF	PART NO.	DESCRIPTION	COMMENTS
1	39254	Weldment and Bearing Assembly	Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLX2HP112CW01, HWNLY2HP112CW01, SWNLC2AP112TW02, SWNLC2AP112TW01, SWNLC2HP112TW01, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLX2HP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW01, SWNLY2AP112TW01, SWNLY2AP112TW01, SWNWY2AP112TW11 and SWNWY2HP112TW11
	39253	Weldment and Bearing Assembly	All other models
2	38505P	Brake Kit	
3	735P3	Brake Pad Kit	Includes 3 pads
	26594P	Silicone Grease	Apply small amount to each new brake pad
4	39739	Screw	
5	35535	Washer	Thin
6	27015	Washer	Thick
7	35535	Washer	For machines experiencing squeaking during agitation; Through Serial Nos. beginning 1612
	203950	Washer	Starting Serial Nos. beginning 1701
	26594P	Silicone Grease	Apply small amount to washer
8	202795	Pulley	
9	26509	Washer	
10	27220	Screw	
11	38008	Helix	
12	28944RP	Lower Bearing	


Front Panel, Base Assembly and Cabinet Kit

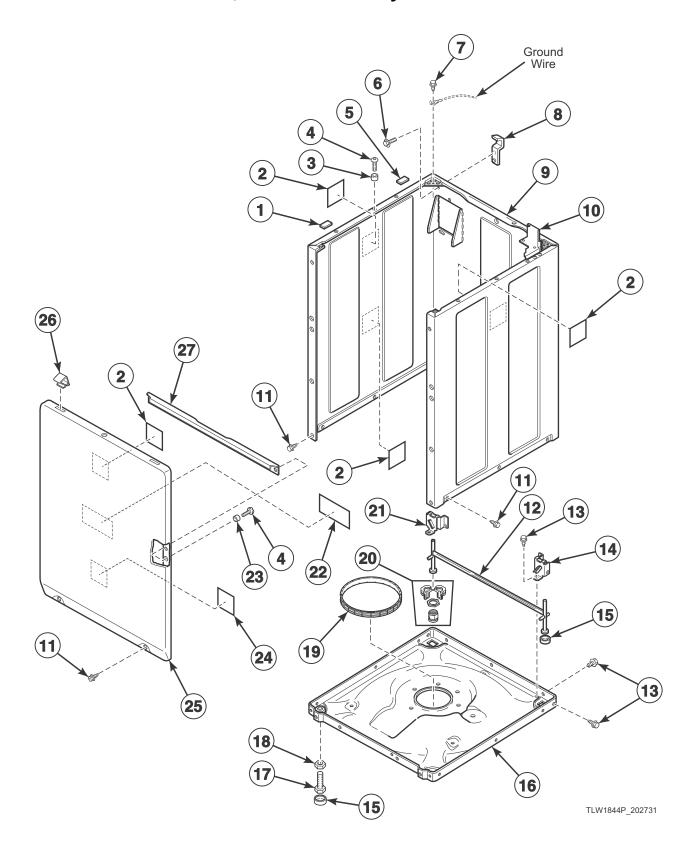

Front Panel, Base Assembly and Cabinet Kit

122P4P
806436P Paint Dark gray 1 56128 Bumper Pad 2 39480 Foam Pad 3 56079 Panel Locator 4 39733 Screw 5 36226 Bumper Pad 6 D501524 Screw 7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
1 56128 Bumper Pad 2 39480 Foam Pad 3 56079 Panel Locator 4 39733 Screw 5 36226 Bumper Pad 6 D501524 Screw 7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
2 39480 Foam Pad 3 56079 Panel Locator 4 39733 Screw 5 36226 Bumper Pad 6 D501524 Screw 7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
3 56079 Panel Locator 4 39733 Screw 5 36226 Bumper Pad 6 D501524 Screw 7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
4 39733 Screw 5 36226 Bumper Pad 6 D501524 Screw 7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
5 36226 Bumper Pad 6 D501524 Screw 7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
6 D501524 Screw 7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
7 52909 Screw 8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
8 27103 Hold-Down Lug Hinge 9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
9 38612WP Service Cabinet Kit White 38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
38612QP Service Cabinet Kit Bisque 38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
38612DG Service Cabinet Kit Dark gray 10 35867 Meter Case Mounting Bracket
10 35867 Meter Case Mounting Bracket
,
11 27196 Screw Slotted hex head
431287 Screw Torx head
12 34443 Leg and Stabilizer Assembly
13 35148 Screw
14 36036 Bracket Right
15 34318 Rubber Foot
16 39788 Base Assembly
17 34319 Leveling Leg
18 21899 Nut
19 37937 Friction Ring
20 566P3 Adjustable Leg Extension Kit Provides adjustment capabilities to rear self-leveling
21 36037 Bracket Left
22 36204 Front Panel Pad
23 28102 Panel Locator
24 203484 Foam Pad
25 38335WP Front Panel White
38335QP Front Panel Bisque
38335DG Front Panel Dark gray
26 35865 Hold-Down Clip
27 35097 Front Panel Brace


Mixing Valve and Motor Disconnect Blocks, Terminals and Terminal Extractor Tool

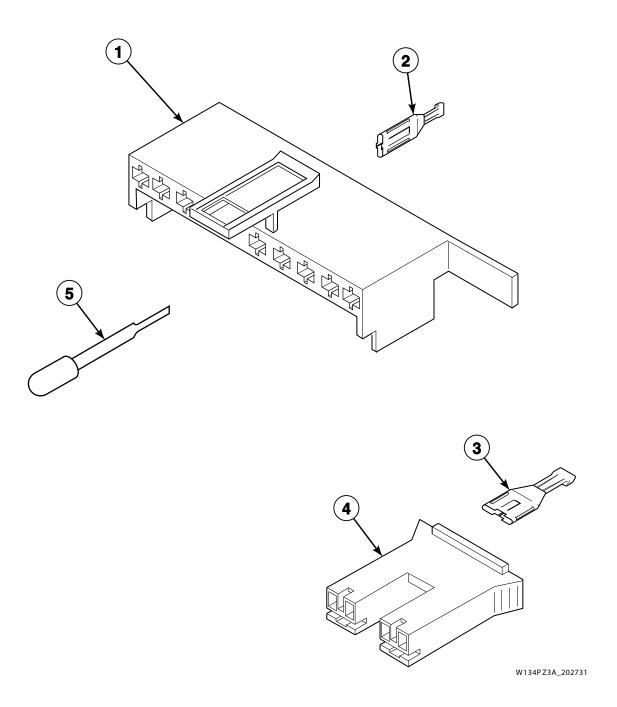

Mixing Valve and Motor Disconnect Blocks, Terminals and Terminal Extractor Tool

REF	PART NO.	DESCRIPTION	COMMENTS	
1	34677	10 Circuit Plug	Motor	
2	00188	Female Terminal	For 1 or 2 wire application	
3	00121	Female Spade Terminal	1/4 inch	
4	34675	Mixing Valve Plug	Natural	
	34676	Mixing Valve Plug	Red	
5	283P4	Terminal Extractor Tool		

Lead-In Cord

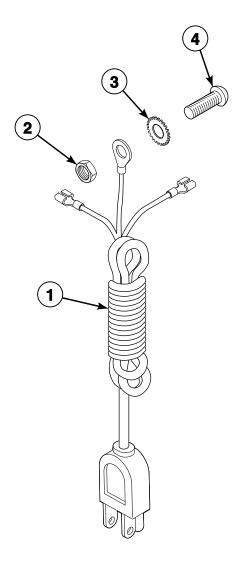


TLW1089P_202731

Lead-In Cord

REF	PART NO.	DESCRIPTION	COMMENTS
1	38362P	Lead-In Cord	Models GWNMN2PP302NW01, GWNSX2PP302NW01, NWNBX2SP302NW22, NWNMN1SP542NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNBX2SP302NW22, SWNBX2SP302NW22, SWNLY2SP302NW22, SWNMN1SP302NW22, SWNMN1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP542NW22 and TWNBX2SP302NW22
	38363	Lead-In Cord	Model SWNLX1SP542NW23
	39931	Power Cord Assembly	Models BWNBX2PP302AW01, BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX2PP302AW01, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNLX2SP302AW01, SWNSX1PP302AW01 and SWNSX1SP302AW01
	39984	Power Cord Assembly	Model SWNSX1SP302BW01
	39925	Power Cord Assembly	Models GWNSX1PP302EW09 and SWNSX1SP302EW09
	39926	Lead-In Cord	Models HWNSX1SP302UW09 and SWNSX1SP302UW01
	201439	Lead-In Cord	Model SWNBX2SP112FW27
	204061	Power Cord Assembly	Model SWNBX2SP082JW01
	804556	Lead-In Cord Assembly	Models HWNBX1SP122DW01, HWNBX1SP542DW01, HWNLX1SP122DW01, HWNLX1SP542DW01, SWNBX1SP122DW01, SWNLX1SP542DW01, SWNLX1SP122DW01 and SWNLX1SP542DW01
	34458	Lead-In Cord	All other models
2	03673	Nut	
3	21735	Washer	
4	20267	Screw	

Terminals

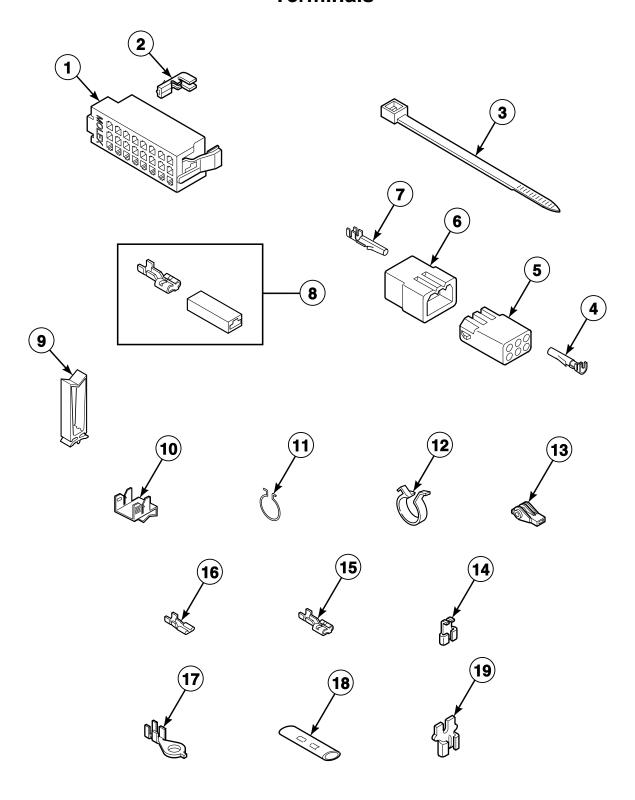


TLW1645P_202731

Terminals

REF	PART NO.	DESCRIPTION	COMMENTS
1	32746	24 Position Housing	Right; Black
	34123	24 Position Housing	Left; White
2	00188	Female Terminal	Used for 1 or 2 wire application
3	55881	Harness Strap	4 inches
	M405829	Cable Tie	Push-mount; 6.13 inches
4	00117	Female Pin Terminal	
5	26301	1 Circuit Receptacle	
	26708	6 Circuit Receptacle	
	26163	9 Circuit Receptacle	
6	26302	1 Circuit Plug	
	23041	6 Circuit Plug	
	23033	9 Circuit Plug	
7	00116	Male Pin Terminal	
8	00359	Insulated Female Spade Terminal	
9	70366201	Wire Clip	
10	00161	Grounding Clip	
11	51291	Wire Clip	
12	D504034	Wire Clip	
13	70210	Insulator	
14	00120	Female Flag Terminal	
15	00223	Female Spade Terminal	Large spade
16	00112	Female Spade Terminal	Small spade
17	00110	Ring Terminal	Small shank
18	21091	Connector	
19	F140562	Connector	


Shipping Materials and Special Tools

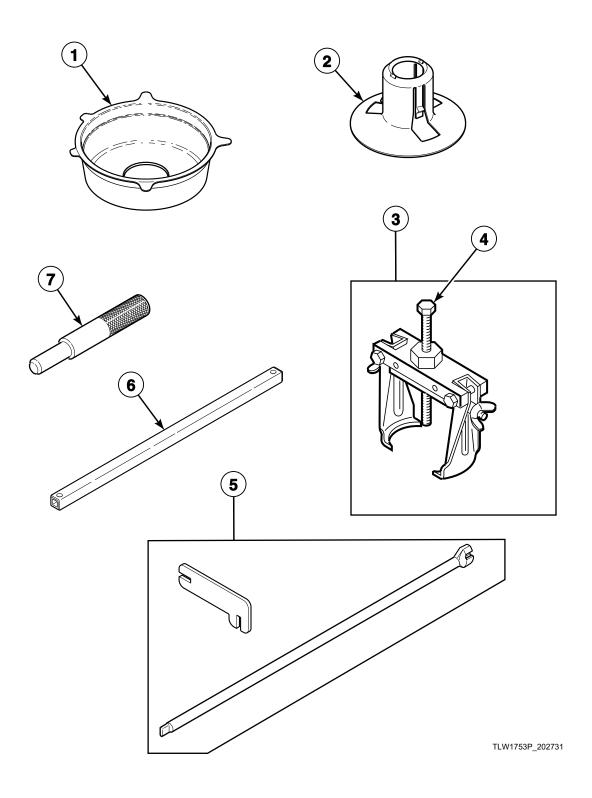

Shipping Materials and Special Tools

REF	PART NO.	DESCRIPTION	COMMENTS
1	200552	Shipping Brace	Install whenever moving washer; Remove before use
2	38149	Shipping Plug	Install whenever moving washer; Remove before use
3	294P4	Agitator Drive Bell Puller	For removal and installation of drive bell to transmission shaft
4	294P4B	Bolt	
5	CK096	Mounting Tool Kit	Use to install and remove electronic coin drops
6	310P4	Ratchet Extension Tool	1/4 inch; Use to install and remove non-electronic coin drops
7	305P4	Transmission Pin Tool	Use pin tools in place of dowel pins when reassembling transmission cover and case; 2 required

Special Tools

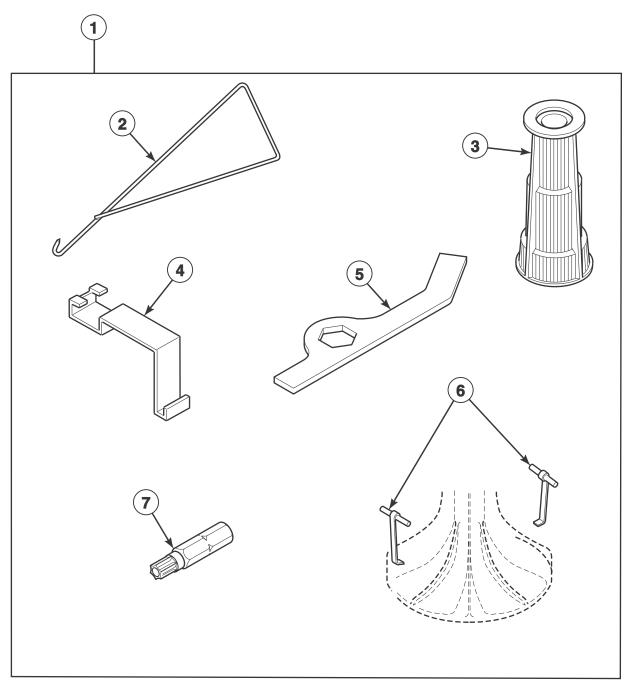


TLW1818P_202731

Special Tools

REF	PART NO.	DESCRIPTION	COMMENTS
1	725P3	Tool Kit	Includes items 2-7
2	321P4	Spring Hook Tool	For removal of centering springs from outer tub
3	293P4	Drive Bell Seal Tool	For installation of 36426 Bell and Transmission Tube Seal
4	273P4	Tub Cover Removal Tool	Use to install 38359 Tub Cover Gasket in outer tub cover
5	306P4	Hex Wrench Tool	For removal of locknut from washtub hub
6	254P4P	Agitator Hook	Use to remove agitator from drive bell; Set of 2
7	281P4	Torx Bit	T15; For removal and installation of control hood security screws
	282P4	Torx Bit	T25; For removal and installation of front panel security screws

Wire Harnesses and Wires (Drawing 1 of 2)

Models BWNMN2PP112CW01, BWNMN2PP302AW01, BWNSX2PP112CW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNSX1PP302EW09, GWNSX2PP112TW01, GWNSX2PP302AW01, GWNSX2PP302AW01, HWNMN2PP112TW01, HWNMN2SP112CW01, HWNSX1SP112CW01, HWNSX1SP302UW09, HWNSX2PP112TQ01, HWNSX2PP112TW01, HWNSX2SP112CW01, NWNMN1SP542NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, PWNSX2PP112TG02, SWNMN1SP302AW01, SWNMN1SP302NW22, SWNMN1SP302SW01, SWNMN2SP112TW01, SWNMN2SP112CW01, SWNMN2SP112TW01, SWNSX1SP112TW01, SWNSX1SP112TW01, SWNSX1SP112TW01, SWNSX1SP302AW01, SWNSX1SP112TW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX1SP302BW01, SWNSX1SP302EW09, SWNSX1SP302NW22, SWNSX1SP302SQ01, SWNSX1SP302SW01, SWNSX1SP302UW01, SWNSX1SP542NW22, SWNSX2SP112TQ01, SWNSX2SP112TW01, SWNSX2SP112TW02, SWNSX2SP112CW02, SWNSX2SP112TQ01, SWNSX2SP112TW01, SWNSX2SP112TW02 and UWNMN2SP112CW01

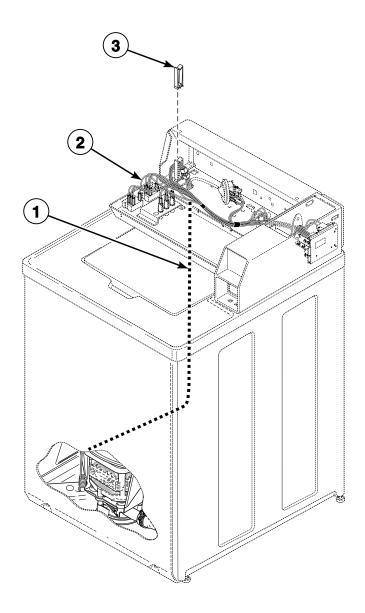

TLW1733P_202731


Wire Harnesses and Wires (Drawing 1 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	45001	18 Gauge Wire	Black; Order wire by foot and terminals as required
	45380	12 Gauge Wire	Orange; Order wire by foot and terminals as required
1	201466	Base Wire Harness Assembly	Models BWNMN2PP302AW01, GWNMN2PP302AW01, GWNMN2PP302NW01, GWNSX2PP302AW01, GWNSX2PP302NW01, NWNMN2SP302NW22 and NWNSX2SP302NW22
	201435	Base Wire Harness Assembly	Models GWNMN1PP302AW01, GWNSX1PP302AW01, GWNSX1PP302EW09, HWNSX1SP302UW09, SWNMN1SP302AW01, SWNMN1SP302SW01, SWNSX1PP302AW01, SWNSX1SP302AW01, SWNSX1SP302BW01, SWNSX1SP302BW01, SWNSX1SP302SW01 and SWNSX1SP302UW01
	38772P	Base Wire Harness Assembly	Models NWNMN1SP542NW22 and SWNSX1SP542NW22
	38661P	Wire Harness Assembly	Base; All other models
2	201766	Hood Harness	Models GWNSX1PP302EW09, HWNSX1SP302UW09 and SWNSX1SP302EW09
	201729	Hood Harness	Models BWNMN2PP302AW01, GWNMN1PP302AW01, GWNMN2PP302AW01, GWNMN2PP302AW01, GWNSX1PP302AW01, GWNSX1PP302AW01, GWNSX2PP302AW01, GWNSX2PP302AW01, WNMMN1SP542NW22, NWNMN2SP302NW22, NWNSX2SP302NW22, SWNMN1SP302AW01, SWNMN1SP302AW01, SWNSX1PP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302NW22, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302AW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP302SW01, SWNSX1SP542NW22
	201688	Hood Harness	All other models
3	70366201	Wire Clip	

NOTE: Individual wires are not available separately. Order complete harness, or order wire by the foot. When applying terminals to wires, it is recommended that the terminals be soldered to the wires.

Wire Harnesses and Wires (Drawing 2 of 2)

Models BWNBC2PP112TW01, BWNBX2PP112TW01, BWNBX2PP302AW01, BWNBY2PP112TW01, HWNBC2PP112TQ01, HWNBC2PP112TW01, HWNBD2SP112CQ01, HWNBD2SP112CW01, HWNBE2SP112CW01, HWNBX1SP122DW01, HWNBX1SP542DW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNBX2SP112CW01, HWNLE2AP112CW01, HWNLE2AP112CW01, HWNLE2AP112CW01, HWNLE2AP112CW01, HWNLX2SP112CW01, HWNLX1SP542DW01, HWNLX1SP542DW01, HWNLX2HP112CW01, HWNLX2SP112CW01, HWNLY2SP112CW01, NWNBX2SP302NW22, PWNBC2PP112TG02, PWNBX2PP112TG02, PWNBX2PP302AG02, SWNBC2PP112TQ01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBC2PP112TW01, SWNBX1SP542DW01, SWNBX2SP112TW02, SWNBX2SP082JW01, SWNBX2SP112FW27, SWNBX2SP112TQ01, SWNBX2SP112TW01, SWNBX2SP302AW01, SWNBX2SP302AW01, SWNBX2SP302NW22, SWNBX2SP302AW01, SWNBX2SP302NW22, SWNBX2SP302AW01, SWNLC2AP112TW01, SWNLC2AP112TW01, SWNLC2AP112TW01, SWNLC2AP112TW01, SWNLC2AP112TW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2SP112TQ01, SWNLC2SP112TW01, SWNLC2SP112TW02, SWNLX1SP12DW01, SWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX2SP112TW01, SWNLX2AP112TW02, SWNLX2HP112TW01, SWNLX2SP302AW01, SWNLX2HP112TW01, SWNLX2SP302AW01, SWNLX2AP112TW01, SWNLX2SP302AW02, SWNLX2AP112TW01, SWNLX2SP302AW02

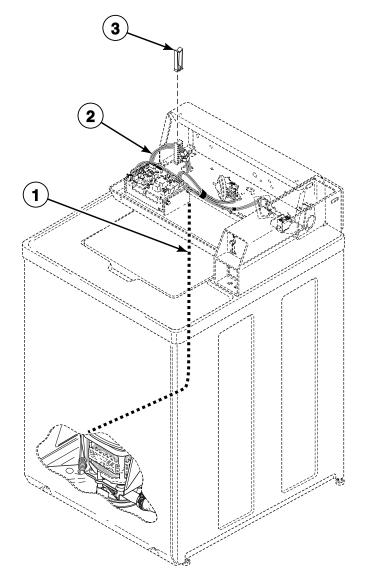

TLW1734P_202731

Wire Harnesses and Wires (Drawing 2 of 2)

REF	PART NO.	DESCRIPTION	COMMENTS
	45001	18 Gauge Wire	Black; Order wire by foot and terminals as required
	45380	12 Gauge Wire	Orange; Order wire by foot and terminals as required
1	201466	Base Wire Harness Assembly	Models BWNBX2PP302AW01, NWNBX2SP302NW22, PWNBX2PP302AG02, SWNBX2SP302AW01, SWNBX2SP302NQ22, SWNBX2SP302NW22, SWNLX2SP302AW01, SWNLY2SP302NW22 and TWNBX2SP302NW22
	202721	Wire Harness Assembly	Base; Models HWNBX1SP542DW01, HWNLX1SP542DW01, SWNBX1SP542DW01, SWNLX1SP542DW01 and SWNLX1SP542NW23
	202838	Wire Harness Assembly	Base; Models HWNBX1SP122DW01, HWNLX1SP122DW01, SWNBX1SP122DW01 and SWNLX1SP122DW01
	38661P	Wire Harness Assembly	Base; All other models
2	210178P	Harness Assembly	Hood; Models BWNBX2PP302AW01, HWNBX1SP542DW01, HWNLX1SP542DW01, NWNBX2SP302NW22, PWNBX2PP302AG02, SWNBX1SP542DW01, SWNBX2SP302AW01, SWNBX2SP302NQ22, SWNBX2SP302NW22, SWNLX1SP542DW01 and TWNBX2SP302NW22
	202671	Wire Harness Assembly	Hood; Models HWNLX1SP542DW01, SWNLX1SP542DW01, SWNLX1SP542NW23, SWNLX2SP302AW01 and SWNLY2SP302NW22
	202667	Wire Harness Assembly	Hood; Models HWNLE2SP112CW01, HWNLX1SP122DW01, HWNLX2SP112CW01, HWNLY2SP112CW01, SWNLC2PP112TW01, SWNLC2PP112TW02, SWNLC2SP112TQ01, SWNLC2SP112TW01, SWNLC2SP112TW02, SWNLX1SP122DW01, SWNLX2PP112TW02, SWNLX2SP112TW01, SWNLX2SP112TW02, SWNLY2PP112TW01 and SWNLY2SP112TW01
	202375	Wire Harness Assembly	Hood; Models HWNLE2AP112CW01, HWNLE2HP112CW01, HWNLX2HP112CW01, HWNLY2HP112CW01, SWNLC2AP112TW01, SWNLC2AP112TW02, SWNLC2HP112TQ01, SWNLC2HP112TW01, SWNLC2HP112TW02, SWNLX2AP112TW02, SWNLX2HP112TW01, SWNLX2HP112TW02, SWNLY2AP112TW01, SWNLY2HP112TW01, SWNWY2AP112TW11 and SWNWY2HP112TW11
	202229P	Wire Harness Assembly	Hood; All other models
3	70366201	Wire Clip	

NOTE: Individual wires are not available separately. Order complete harness, or order wire by the foot. When applying terminals to wires, it is recommended that the terminals be soldered to the wires.

Notes

Parts Index

A	С
Adjustable Leg Extension Kit 566P371	Cable Connection Box 3992217, 21, 23, 27, 3°
Agitate and Spin Belt	Cable Tie
200923 51, 53, 55, 57	M40582977
38174 55, 57	Capacitor
Agitator 33174 59	. 203140
Agitator Cap	Capacitor and Clamp Kit
36515	39259P51, 53, 55
Agitator Drive Bell Puller	Capacitor Clamp
294P479	3753551, 53, 55
Agitator Hook 254P4P81	Central Pay Harness D51147825, 27, 29, 31, 33, 35, 37
Agitator Pinion	Chassis Mounting Bracket
27003	201581
Anti-Seize Compound 27604P65	Circuit Board Support D50152323
	Clip 2015721
В	Coin Box Extension Kit 803578P
Balance Ring Assembly	Coin Drop
3983759	20073111
Base Assembly	38963P1
39788 71	39748
Base Wire Harness Assembly	70441601P11 7044160311
201435 83	
201466 83, 85	Coin Drop Assembly CK1141
38772P83	CK123
Bell and Transmission Tube Seal	20114111
36425 59	21019511
Bell Plug	21019611
3651159	38462P11
Belt and Pump Kit RB15000355	38463
	38464P11 3846711
Bolt 02505	38472
294P4B	38475
29651	385191
32184	38521
	39157
Bracket	553192
202083	702811021
36036	70441602
3603771	704473011
803662 7	70482401
Brake Kit	7050690111
38505P	Coin Drop Kit
Brake Pad Kit	CK0551
735P369	CK0561
Bumper	CK0571
M400795 15, 17, 19, 21, 23, 25,	CK0581
27, 29, 31, 33, 35, 37	CK0601
2168539, 43	CK0711
Bumper Pad	CK0771
36226	CK0781
56128 71	CK0851
Bushing	CK0861
33446 39 43	CK08911

87

CK090 11	Control Panal Accombly
	Control Panel Assembly 201742W15. 17
CK091 11	
CK09711	210042DG25
CK09811	210042Q25, 29
CK107 11	210042W25, 27, 29, 31
CK11111	210137W33, 35, 37
CK12211	Control Panel Bumper
Coin Drop Wire Harness	20246915, 17, 19, 21, 23, 25, 27, 29, 31, 33, 35, 37
201104	Control Panel Overlay
	201003
Coin Funnel Kit	201007
523P37	
Coin Identification Paper	20241629, 31
38725 9, 13	Control Shield
Coin Slide Extension Kit	D5123047
200913	21005325, 27, 29, 31, 33, 35, 37
	Control Sticker Overlay
Coin Slide Kit CK001 7	20230929, 35
	·
CK009	Counterweight Assembly
CK010P7	3876961
CK0117	Cover Plate
CK0147	37828P43
CK017 7	Cycle Selector Switch
Connector	20168615, 17, 19, 21, 23
F14056277	201000
21091	
Control Assembly	D
202391P29, 31, 35	D
202392P25, 27, 33	Diagnostic Wire Harness Assembly
202393P7, 15, 17	Diagnostic Wire Harness Assembly 80068033, 35, 37
202820P29, 35, 37	·
202831P25, 27, 33	Disconnect Power Warning Label
Control Hood	D50528115, 17, 33, 35, 37, 39
210142W 15, 17, 33, 35, 37	Door Lock Spacer
37075DG19	20141443
37075Q	Drain Extension Kit
37075W	451P367
Control Lid Lock Assembly 37225P23	Drain Hose 2829367
Control Overlay	Drain Hose Elbow
201667 19, 21	3576667
201668 19	
	3699067
20167323	3699067 Drive Bell and Seal Kit
201673	Drive Bell and Seal Kit
	Drive Bell and Seal Kit 39508P59
201674 19	Drive Bell and Seal Kit 39508P59 Drive Bell Seal Tool
201674	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201762 15	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201762 15 201935 19, 21	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201762 15 201935 19, 21 201936 15, 17	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201762 15 201935 19, 21 201936 15, 17 201937 21	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15	Drive Bell and Seal Kit 39508P
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15 202362 15	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 81 293P4 81 Drive Pinion 65 Dual Overlay 9 E Electrical Shock Label 78211201 23, 39
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15 202362 15 202408 23	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15 202408 23 202415 35, 37	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly 70294103P 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15 202408 23 202417 29, 31	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label 78211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15 202408 23 202415 35, 37	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15 202408 23 202417 29, 31	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13 70294106 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202134 15 202408 23 202415 35, 37 202417 29, 31 20405 19	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label 78211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13 70294106 13 70294107 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202362 15 202408 23 202417 29, 31 202418 35 204005 19 Control Panel and Bracket Assembly	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13 70294106 13 70294107 13 70294110 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202362 15 202408 23 202417 29, 31 202418 35 204005 19 Control Panel and Bracket Assembly 36520DG	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label 78211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13 70294106 13 70294107 13 70294110 13 70294111 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202362 15 202408 23 202417 29, 31 202418 35 204005 19 Control Panel and Bracket Assembly 36520DG 19 36521QP 19, 21	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13 70294107 13 70294110 13 70294111 13 70294117 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202362 15 202408 23 202417 29, 31 202418 35 204005 19 Control Panel and Bracket Assembly 36520DG	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13 70294106 13 70294110 13 70294111 13 70294117 13 70294119 13
201674 19 201675 19 201718 15 201744 15, 17 201935 19, 21 201936 15, 17 201937 21 201938 17 202012 15, 17 202022 23 202129 15 202130 21 202362 15 202408 23 202417 29, 31 202418 35 204005 19 Control Panel and Bracket Assembly 36520DG 19 36521QP 19, 21	Drive Bell and Seal Kit 39508P 59 Drive Bell Seal Tool 293P4 81 Drive Pinion 37405 65 Dual Overlay 39073 9 E Electrical Shock Label F8211201 23, 39 Electronic Coin Drop Assembly 70294103P 13 70294104 13 70294105P 13 70294106 13 70294110 13 70294111 13 70294117 13 70294117 13

70294121 13	
70294122 13	G
70513302 13	G
70513311 13	Gasket
Electronic Coin Drop Kit	70392701P17
CK099	
CK100	Gear and Stud Assembly
	2657765
CK101 13	Gear Sleeve
CK103 13	3886465
CK108 13	
CK10913	Graphic Overlay
CK110 13	20199919
CK113	Grease
CK115	36765P59
CK116	
CK110	Grommet
	29175
CK118 13	8026241, 43
CK119 13	Grounding Clip
CK120 13	0016177
CK121 13	
Electronic Control Shield	
D501441	
	Н
End Cap	П
210108W 15, 17, 33, 35, 37	
210109W 15, 17, 33, 35, 37	Harness Assembly
Ethernet Gateway Kit	210178P85
NK320	802904P9
INN320 29, 31, 30, 31	802905
	Harness Strap
	5588177
_	
F	Helix
	3800869
Female Flag Terminal	Hex Wrench Tool
00120 77	306P481
Female Pin Terminal	
00117	Hinge Gasket
	3433839, 43
Female Spade Terminal	Hold-Down Clip
0011277	3586571
00121 73	
00223	Hold-Down Lug Hinge
Female Terminal	2710371
0018873, 77	Hood Back Panel
0010073, 77	38267
Fill Hose	3992021, 23, 27, 31
202799 49	
202800	Hood Harness
20617	20168883
20618	20172983
	20176683
37380	Hose and Washers Kit
3738149	20367549
Fill Hose Kit	
38349P49	20367649
	Hose Clamp
Flex Vane Agitator	F20020467
36507 59	2021167
Foam Pad	20391
20348471	36801
203404	
39480 71	3928263
39480	39282
39480 71	80080347
39480	80080347 Hose Clip
39480	800803
39480	800803
39480	800803
39480	800803
39480	800803
39480 71 Friction Ring 37937 71 Front Panel 38335DG 71 38335QP 71 38335QP 71 38335WP 71	800803
39480 71 Friction Ring 37937 71 Front Panel 38335DG 71 38335QP 71 71 38335WP 71 71 Front Panel Brace 35097 71 71	800803
39480	800803
39480 71 Friction Ring 37937 71 Front Panel 38335DG 71 38335QP 71 71 38335WP 71 71 Front Panel Brace 35097 71 71	800803

70011010	50.04	Lid	0/
766Þ3A	59, 61	200891Q 200892WP	
Hub Spacer	0.5	200692WP	
201212	65	201760Q1	
		204615W	
-		33450DG	
1		Lid and Carton Assembly 201460QP	
Idler Lever 38011	51 52 55 57	Lid Hinae	
	51, 55, 55, 57	36437	
Idler Lever and Belt Kit 202972	E4 E2 E7	36438	39, 43
	31, 33, 37	Lid Lock	
Idler Lever Kit 959P3	57	202434	43
		Lid Lock Catch Assembly	
Idler Lever Spring 201189	51 53 55	201307P	43
202032		Lid Lock Gasket	
Idler Pulley	01, 00, 00, 01	30378	43
38225P	51, 53, 55, 57	Lid Lock Kit	44
Idler Shaft	, , ,	837P3	4
210186	51, 53, 55, 57	Lid Lock Wire Harness Assembly 31973	4.
Input Shaft			43
38268P	65	Lid Plug 34153	30
Insulated Female Spade Terminal			
00359	77	Lid Switch Assembly 37631	ΔI
Insulator			······································
70210	77	Lid Switch Indicator Light 39536	21
Isolator Assembly		Lid Switch Shield	Σ
204062	51, 53, 55	202697	4!
Isolator Post		Light	
		Light	
38325	51, 53, 55	801431	15. 17. 19. 21. <i>2</i> 3
38325	51, 53, 55	801431	15, 17, 19, 21, 23
38325	51, 53, 55	801431 Lower Bearing	
		801431	
38325 J	51, 53, 55	801431 Lower Bearing	
Jumper Configuration Assembly	<u> </u>	801431 Lower Bearing 28944RP	
J	<u> </u>	801431 Lower Bearing	
Jumper Configuration Assembly	<u> </u>	801431 Lower Bearing 28944RP	
Jumper Configuration Assembly	<u> </u>	801431 Lower Bearing 28944RP	69
Jumper Configuration Assembly	<u> </u>	M Male Pin Terminal 00116	69
J Jumper Configuration Assembly M4135072	<u> </u>	801431 Lower Bearing 28944RP M Male Pin Terminal	
J Jumper Configuration Assembly M41350729	5, 27, 29, 31, 35, 37	Male Pin Terminal 00116	7
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	Male Pin Terminal 00116	7
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25 	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W	15, 17, 55
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25 75 75	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W 802505W	15, 17, 55
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W	15, 17, 55
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W 802505W 803063DG Meter Case Assembly Kit	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W 802505W 803063DG Meter Case Assembly Kit 803063WP 803575DG	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W 802505W 803063DG Meter Case Assembly Kit 803063WP 803575DG 803575WP Meter Case Bracket Gasket 35526 Meter Case Gasket 26354	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	25 	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W 802505W 803063DG Meter Case Assembly Kit 803063WP 803575DG 803575DG 803575WP Meter Case Bracket Gasket 35526 Meter Case Gasket 26354 Meter Case Kit 201010QP 201010WP Meter Case Lockdown Bracket 35525	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25	M Male Pin Terminal 00116	
J Jumper Configuration Assembly M413507	5, 27, 29, 31, 35, 37 25	M Male Pin Terminal 00116 Male Tab Terminal 00177 Mechanical Counter Kit Assembly 201280P Meter Case Assembly 38724Q 38724W 802505W 803063DG Meter Case Assembly Kit 803063WP 803575DG 803575DG 803575WP Meter Case Bracket Gasket 35526 Meter Case Gasket 26354 Meter Case Kit 201010QP 201010WP Meter Case Lockdown Bracket 35525	

Meter Case Mounting Bracket Assembly	
35867	0
Mixing Valve 202395P	
202396P	Operation Instruction Label
203145P	203152
Mixing Valve Plug	
34675	Options Label
34676	202828
Mixing Valve Screen 24122	Opto Coupler 200674PS
Mixing Valve Shield	Outer Tub Assembly
² 20289947	203603P61
Mixing Valve-to-Tub Cover Hose	203604P61
~ 202472 47	Output Shaft
Motor Assembly	36570P65
20245755	Overlay
35030P55	20091825, 27
Motor Kit	20091925, 27
201433P53, 55	201091
38034P55	20209825, 27
38035P55	202174
835P351, 53, 55	20231025, 33 20283233
Motor Mount	203526
38395 51, 53, 55	•
Motor Mount Bracket	Overlay Kit 38676
200941 51, 53, 55	30070
Motor Shield	
34754	
	P
Motor Side Shield 36965	B 1.4
	Paint 806436P71
Mounting Tool Kit CK09679	
CR09019	Panel Clip M40649415, 17
	·
	Panel Locator 2810271
N	5607971
Network Controller Kit NK220	Pinch Warning Label F861570161
	Plug, 1 Circuit
Network Retrofit Kit NK201	2630277
Network Wire Harness Assembly 44088501P37	Plug, 10 Circuit 3467773
	Plug, 6 Circuit
Nut M400981	2304177
03673	Plug, 9 Circuit
201216	2303377
2189971	Porcelain Touch-Up Paint
2200143	122P4P71
24205 15, 17, 19, 21, 23	370P4P
27222 41, 43	Power Cord Assembly
28803 51, 53, 55, 57	20406175
29220 59	3992523, 75
29786	3993117, 21, 27, 31, 75
29796 7 30647 7, 9	3998421, 75
35423	Pressure Bulb
36020	3090763
44087101 19, 21, 23, 25, 27, 29, 31	Pressure Switch
52566	20265515, 17, 19, 21, 23, 25, 27, 33
5294723	80363729, 31, 35
685846 51, 53	803638P29, 31, 35, 37
802337	Pressure Switch Bracket
802343 17	20178929, 31, 35, 37

Pulley		27196	7
202795	69		59
Pump		27220	69
201566P	51 53 55	27229	51, 53, 55, 57
	31, 33, 35		6
Pump Assembly 201442P	E1 E2 EE		65
	51, 53, 55		4
Pump-to-Drain Elbow Hose			39. 4
38273	67		7
Push-On Clip			51, 53, 55, 6
34762	23		
0 17 02	20		19, 21, 23, 25, 29, 3
			7, 9
			51, 53, 55
R			47
N .			59
Rack		39566	6 [,]
201664	65	39733	7 ⁻
		39739	69
Ratchet Extension Tool		431287	41, 43, 7
310P4	79		5, 17, 25, 27, 29, 31, 33, 35, 3°
Rear Panel		52909	39, 43, 51, 53, 55, 67, 7
201732	15		
203072			1
203074		Sealant	
210143		200996P	59, 6
		Service Cabinet Kit	
Receptacle, 1 Circuit			7
26301	77	38612QP	7 ⁻
Receptacle, 6 Circuit			7 ⁻
26708	77		
		Service Door Assembly	
Receptacle, 9 Circuit 26163	77		7, 9
20103	11		7, 9
Reduction Gear		39874WP	7, 9
37404P	65	Shipping Brace	
Resistor		200552	79
210100 15, 17	2 21 23 25 27 20 31 35		
	, 21, 23, 23, 27, 29, 31, 33	Shipping Plug	7.
Retaining Ring	54 50 55 57		79
23748		Shock Warning Label	
27197	65	D511021	17, 21, 3 ⁻
Ring Terminal		Silicone Grease	
00110	77		69
Rocker Switch 70455101	15 17	Single Overlay	
	15, 17	38717	
Rubber Foot		Siphon Break Kit	
34318	71		6
		Slide	_
S		26493	69
•		Splash Shield	
Screw			6 [,]
D500226	10 21 22		
D501086 15, 17, 19, 21		Spline Insert	
			59
D501524 7, 15, 17, 25		Spring	
D503661		804794	-
	27, 29, 31, 33, 35, 37	Spring Clip	
D503673	7, 9, 39, 43	210202	51, 53, 55
D503688	7		
M402574	45	Spring Hook Tool	_
02916	19, 21, 23, 25, 27, 29, 31	321P4	8 ⁻
201415		Strain Relief	
201773			4 [,]
202623			T
		Support Barrel	
20267		56534	41, 43
20530		Switch	
23008	•		
23222	19, 21, 23, 25, 27, 29, 31	27761	15, 17, 19, 2 ⁻
23962	. 15, 17, 19, 21, 23, 25, 27, 29, 31, 33, 35, 37, 41, 45	33445	4
23222	19, 21, 23, 25, 27, 29, 31	27761	15, 17, 19,

431159 7	Tube
Switch Assembly	20233353
39256	Tubing
55882	20269963
Switch Knob	20270063
39897 15, 17, 19, 21, 23	20329663
Switch Mounting Plate	Tub-to-Pump Hose
29676	3835 167
T	U
Terminal Extractor Tool	USB Gateway Kit
283P4	NK33Ó29, 31, 35, 37
Tool Kit	
725P381	
	147
Top 203579DG41	W
39167QP41	Warning Label
39167WP41	D50004961
	D50031461
Top Assembly 210173WP41	D50031633, 35, 39
39184WP	•
39339W41	Washer D50408251, 53, 55, 57
	F43033923
Top Shield	M40001719, 21, 23, 25, 27, 29, 31
202932	02431
202977	200608
3974441, 43	20290
Torx Bit	203950
281P481	21735
282P481	2650965, 69
Transformer	27015
201375P13, 25, 27, 29, 31, 33, 35, 37	28094
201587P15, 19	29260
201616P 15, 17, 21, 23	35092
210018P25, 29	35535
803527P25, 27, 29, 31, 35	3777251, 53, 55
Transmission Assembly	3924941, 43, 61
38165P65	5254951, 53, 55, 57
	802254
Transmission Case Assembly 33223P65	803615
	8139251, 53, 55, 57
Transmission Cover Assembly	9117615, 17, 19, 21, 23
37471 65	
Transmission Oil	Washtub Gasket
27243P65	3912259
Transmission Pin Tool	Washtub Kit
305P479	719P359
Transmission Rebuild Kit	Water Hose
RB15000465	F20011649
	Weldment and Bearing Assembly
Transmission Sealant 37577P65	3925369
	39254
Tub Assembly	
39252P59	Wire Clip D50403477
39387P59	
Tub Cover Assembly	5129177 7036620177, 83, 85
202461 61	
203154 61	Wire Guard
Tub Cover Gasket	201595P9
3835961	Wire Harness Assembly
Tub Cover Removal Tool	202229P85
273P481	20237585
	20266785
Tub Kit	20267185
39250P59	20272185
	20283885

38661P	83, 85
Wireless Network Kit NK301	29, 31, 35
Wireless Transceiver Assembly 202335	37
Wire, 12 Gauge 45380	83, 85
Wire, 18 Gauge 45001	83, 85